

BS 4L

(D) Montageanleitung



(GB) Assembly Instructions

(I) Istruzioni per il montaggio

(F) Instructions de montage

(NL) Montage-instructies

(DK) Montagevejledningen

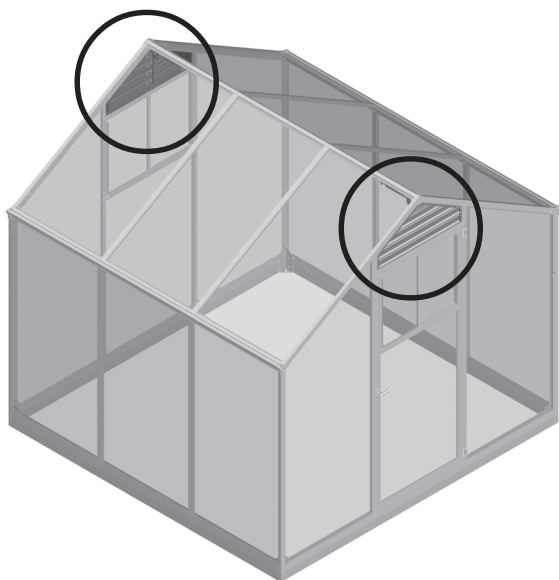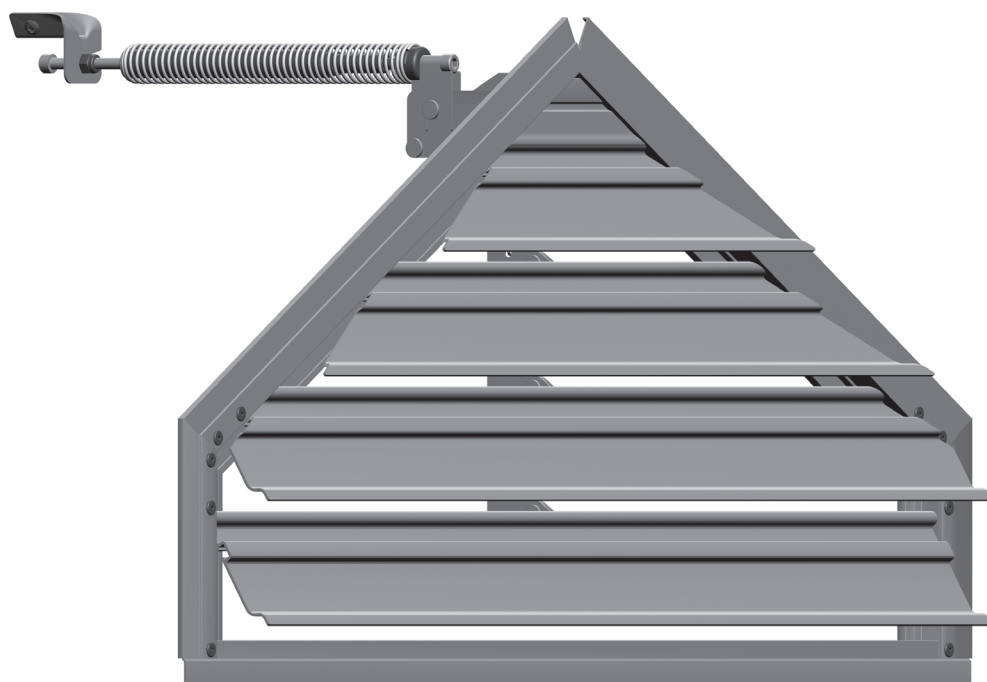

(D) Thermozyylinder (Pos. 3) keinem Frost aussetzen!

(GB) Do not expose the thermal cylinder (Pos. 3) to freezing temperatures.

 
(I) Non esponete al gelo il pistone per l'apertura automatica (Pos. 3)!

(F) Ne pas exposer les vérins thermiques (Pos. 3) au gel!

(NL) Thermocilinder (Pos. 3) niet blootstellen aan vorst!

(DK) Termocylinderen (Pos. 3) må ikke udsættes for frost!

Einzelteilliste BS 4L

Position	Artikel-Nr.	Form	Bezeichnung	Größe mm	Menge
1	086.36.513.64		BS 4 L ohne Zylinder	-	1
2	086.50.000.16		Schieber	-	1
3	36.513.37		Thermact Zylinder Typ E	130	1
4	086.50.000.22		Innensechskantschraube	M6 x 25	1
5	086.50.000.23		Innensechskantschraube	M6 x 55	1
6	086.50.000.24		Firstbefestigung	-	1
7	086.51.046.20		Sechskantmutter mit Klemmteil	M6	6
8	086.50.521.69		Bohrschraube	4,2 x 9,5	3
9	086.50.001.91		Abdeckblech	-	2
10	086.50.002.18		Gewindestange	M6 x 400	1
11	086.51.246.01		Hutmutter	M6	2

