



Einhell

BLUE

BG-CG 18 B

Cordless Grass and Bush Shear

Art.-No. 34.106.12

A combination unit of cordless grass shear and shrub shear. Edges and corner on your lawn pose no longer a problem. The integrated and powerful power pack makes you independent of power supply. After using the grass shear inclusive telescopic handle can be stowed in the wall mounting certainly and the batteries can be reloaded. Two in the wall mounted integrated LED's give information about the loading condition of the batteries during the loading process. The safety switch blocks an unintended start of the unit. The attachable telescopic handle makes it possible to work in an upright position. A safety switch is also integrated in the handle grip itself.

Features

- Safety switch (1)
- Grass cutting blade (2)
- Castors for easy guidance (3)
- Shrub cutting shear (4)
- Wall mounting bracket with integrated charger (5)
- Telescopic handle with tilt angle adjustment (6)
- Tool-less knife exchange

Technical Data

- | | |
|--|--------------------|
| ■ Battery: | 18 V / 1,200 mAh |
| ■ Charging time: | 7-9 h |
| ■ Operating time: | max. 90 minutes |
| ■ Cutting width with grass cutting blade: | 90 mm |
| ■ Cutting length with shrub cutting blade: | 170 mm |
| ■ Cutting strength with shrub shear: | 8 mm |
| ■ Teeth space of shrub cutting shear: | 8 mm |
| ■ Net weight: | 3 kg |
| ■ Gross weight: | 3.5 kg |
| ■ Packing dimensions: | 670 x 140 x 160 mm |
| ■ Bar code: | 4006825548365 |
| ■ Sales unit: | 4 pcs |

