 


# BLADE ASSEMBLY

**Freecall** (Aus) 1800 069 486  
(NZ) 0508 069 486

[www.ozito.com.au](http://www.ozito.com.au)

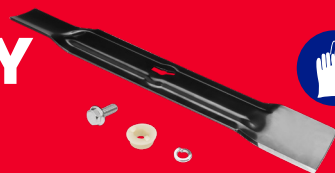

**PXLMB-335**

**ALWAYS HANDLE THE BLADE WITH CARE - SHARP EDGES CAN CAUSE SERIOUS INJURY, PLEASE USE GLOVES.**



**WARNING!** ALWAYS ENSURE THE MOWER BLADE HAS COMPLETELY STOPPED, REMOVE THE SAFETY KEY, BATTERIES AND GRASS CATCHER PRIOR TO ANY MAINTENANCE.

## REMOVING AND FITTING THE BLADE:

Only replace the blade with a genuine Ozito PXC replacement blade, as this will ensure top performance and safety under all conditions.

1. To remove the blade bolt, hold the blade firmly and with a 13mm socket loosen the blade bolt by turning it anti-clockwise.

 
 
**Note:** A piece of timber will assist in holding the blade while removing or tightening the blade bolt.

2. Remove the blade bolt, spring washer, blade and spacer.

3. To fit the blade, first place the spacer, then the blade (writing facing out) over the centre hole of the spacer, aligning the lugs.

**Note:** The shape and position of the lugs prevent the blade from fitting in the wrong direction.

4. Fit the bolt and spring washer with a universal wrench. The tightening torque should be approx. 25Nm.

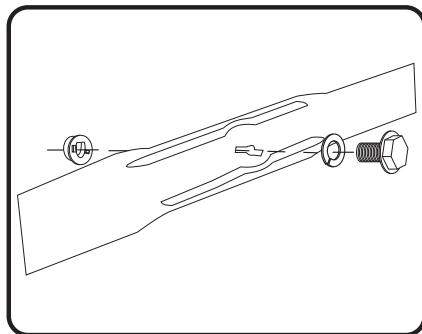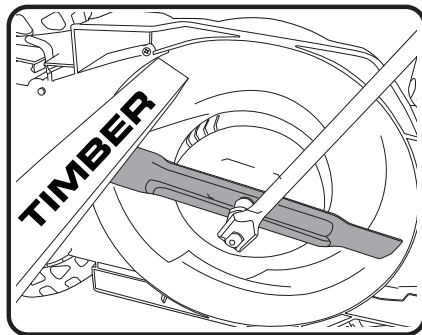

**Replace the metal blade after 50 hours mowing or 2 years whichever is sooner. If the blade is cracked or damaged replace it with a new one.**

**OZITO** 25 Fox Drive, Dandenong South, Vic 3175, Australia.