



18V BRUSHLESS


# HEDGE TRIMMER

## INSTRUCTION MANUAL

### SPECIFICATIONS

Input:	18V
Cutting Speed:	2,000/3,000 SPM
Cutting Capacity:	Ø24mm max.
Cutting Length:	610mm max.
Blade Length:	670mm
Weight:	2.9kg

ozito.com.au

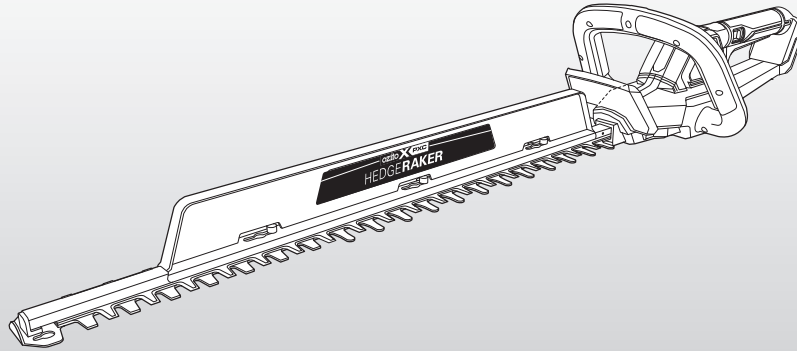


### STANDARD EQUIPMENT



Brushless Hedge Trimmer



HEDGERAKER Cuttings Collector

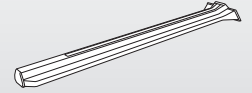

Blade Cover

**5 YEAR**  
REPLACEMENT WARRANTY

**PXBHTS-1861**

## WARRANTY

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO YOUR NEAREST BUNNINGS WAREHOUSE WITH YOUR BUNNINGS REGISTER RECEIPT. PRIOR TO RETURNING YOUR PRODUCT FOR WARRANTY PLEASE TELEPHONE OUR CUSTOMER SERVICE HELPLINE:

**Australia 1800 069 486**

**New Zealand 0508 069 486**

TO ENSURE A SPEEDY RESPONSE PLEASE HAVE THE MODEL NUMBER AND DATE OF PURCHASE AVAILABLE. A CUSTOMER SERVICE REPRESENTATIVE WILL TAKE YOUR CALL AND ANSWER ANY QUESTIONS YOU MAY HAVE RELATING TO THE WARRANTY POLICY OR PROCEDURE.

### WARNING

The following actions will result in the warranty being void.

- If the tool has been operated on a supply voltage other than that specified on the tool.
- If the tool shows signs of damage or defects caused by or resulting from abuse, accidents or alterations.
- Failure to perform maintenance as set out within the instruction manual.
- If the tool is disassembled or tampered with in any way.
- Professional, industrial or high frequency use.

The benefits provided under this warranty are in addition to other rights and remedies which are available to you at law.

Our goods come with guarantees that cannot be excluded at law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Generally you will be responsible for all costs associated with a claim under this warranty, however, where you have suffered any additional direct loss as a result of a defective product you may be able to claim such expenses by contacting our customer service helpline above.

 
### 5 YEAR REPLACEMENT WARRANTY

Your Product is guaranteed for a period of 60 months from the original date of purchase and is intended for DIY (Do It Yourself) use only. If a product is defective it will be replaced in accordance with the terms of this warranty. **Lithium Ion batteries and chargers are covered by a 36 month warranty.** Warranty excludes consumable parts, for example: bearings, blades, blade cover.

# KNOW YOUR PRODUCT


## BRUSHLESS HEDGE TRIMMER

1. Impact Guard
2. HEDGERAKER Cuttings Collector
3. Blade
4. Safety Guard
5. Front Handle/Carry Handle
6. Safety Switch
7. Speed Control
8. Handle Lock
9. Rotating Rear Handle
10. On/Off Trigger
11. Blade Cover

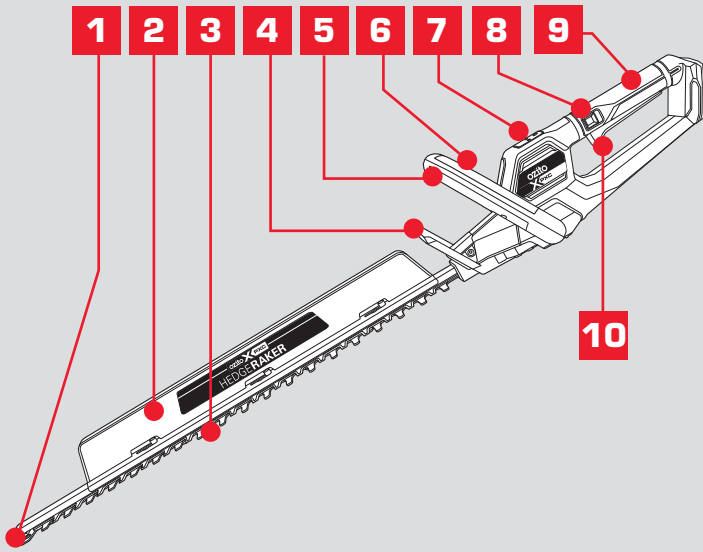

## ACCESSORIES

11

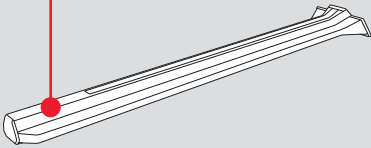

## BATTERY & CHARGER

This tool is compatible with all battery and chargers from the Ozito PXC Range.

## ONLINE MANUAL

Scan this QR Code with your mobile device to take you to the online manual.



**5 YEAR**  
REPLACEMENT WARRANTY

# SETUP & PREPARATION

## 1. ASSEMBLY



**WARNING!** ENSURE THE HEDGE TRIMMER IS SWITCHED OFF AND THE BATTERY IS DISCONNECTED BEFORE PERFORMING ANY OF THE FOLLOWING TASKS.



**WARNING!** WHEN HANDLING THE BLADE ASSEMBLY, WEAR NON-SLIP, HEAVY-DUTY PROTECTIVE GLOVES. DO NOT PLACE YOUR HAND OR FINGERS BETWEEN BLADES OR IN ANY POSITION WHERE THEY COULD GET PINCHED OR CUT. NEVER TOUCH BLADES OR SERVICE THE UNIT WITH THE BATTERY INSTALLED.



**WARNING!** WHEN TRANSPORTING THE HEDGE TRIMMER FROM ONE LOCATION TO ANOTHER, ALWAYS CARRY USING THE FRONT HANDLE ONLY. NEVER CARRY HOLDING THE BLADE AS IT IS VERY SHARP AND WILL CUT YOU.

## Blade Cover


The blade cover protects the blade when not in use. Simply slide it off the blade before use. Once finished operating, place the cover back over the blade.



**WARNING!** NEVER OPERATE THE HEDGE TRIMMER WHILE THE BLADE COVER IS FITTED.

## Safety Guard

Ensure the safety guard is fitted securely onto the hedge trimmer before use. Tighten the screws on either side if necessary.

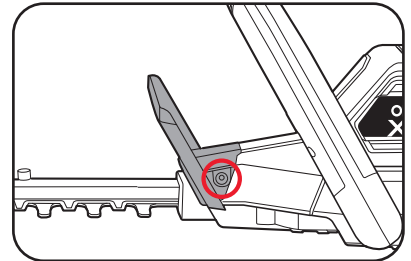


**WARNING!** NEVER USE THE HEDGE TRIMMER UNLESS THE SAFETY GUARD IS FITTED.

## HEDGERAKER Cuttings Collector

For horizontal cutting we recommend that you install the cuttings collector. This enables you to remove the cuttings easily as the surface of the hedge remains clear.

1. Position the cuttings collector on the cutter rail.
2. Then push the cuttings collector towards the safety guard to clamp it securely under the three retaining pins.

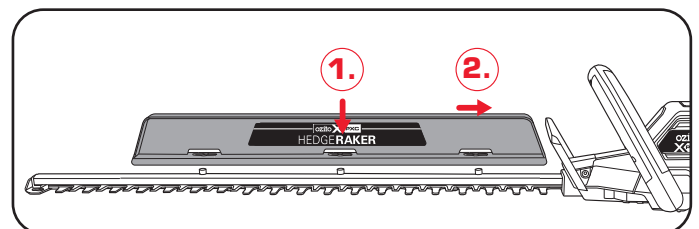


**5 YEAR**  
REPLACEMENT WARRANTY

# OPERATION


## 2. INSERTING & REMOVING THE BATTERY

### Inserting the Battery

1. Align the ribs of the battery with the recess on the rear of the handle.

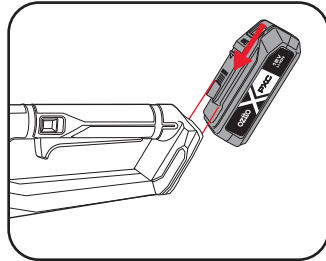


2. Slide the battery in so that it clicks into place.

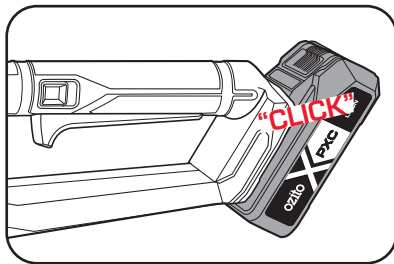

### Removing the Battery

1. Press and hold the battery release tab to release the battery as you slide the battery out.

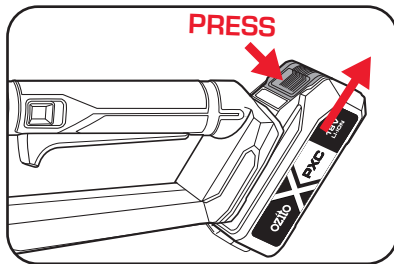

### Run Time

The operating time of the PXC battery (the area that can be covered with a single battery charge) is largely dependent on the performance speed selected, the state of the shrubbery (e.g. Density, moisture, thickness, etc.) and the rate of work.



Frequently turning the equipment on and off while hedge trimming will also reduce the amount runtime and area that you can covered. If the operating time of the PXC battery (runtime and area coverage) is still unsatisfactory in spite of the above measures, you can remedy the problem by using PXC battery with a larger capacity (Ah).

## 3. CONTROLS

### Rotating Handle

The hedge trimmer is fitted with a rotatable rear handle. It can be rotated 90° to the left and right.

1. To rotate the rear handle slide the handle lock to the rear and rotate the rear handle left or right 90°. The handle lock will snap back to lock the handle in position.
2. To return the handle to its original position, release the lock and rotate the rear handle 90°.

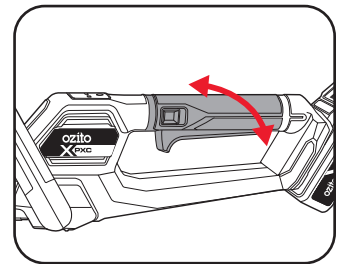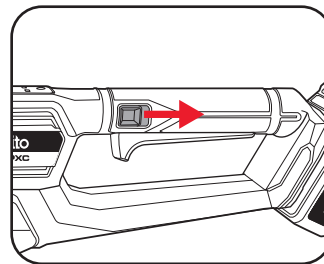


**Note:** The handle should be rotated through 90° when performing vertical cuts.

### Speed Control

 
The hedge trimmer features electronic speed control for setting the cutting speed. Two speed settings are possible. Adjust between maximum operating time (ECO) and maximum speed & performance (MAX).

1. As soon as the safety switch or the on/off trigger is pressed, a green LED (ECO) or a blue LED (MAX) will illuminate.

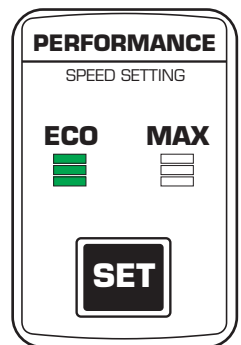

2. Change the cutting speed setting between each speed with each press of the SET button. Changing the cutting speed is only possible when the motor is not running.

**Note:** The LED will stay illuminated during operation of the hedge trimmer and up to 15 minutes after non use.

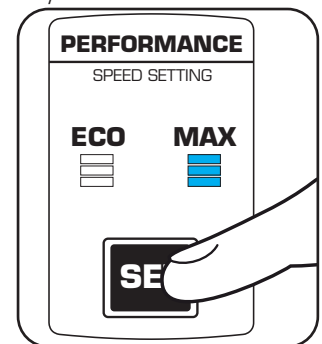


## Switching On and Off




**WARNING!** BEFORE YOU START THE UNIT, MAKE SURE THAT THE HEDGE TRIMMER IS NOT MAKING CONTACT WITH ANY OBJECTS.

1. Squeeze the safety switch as you hold the front handle with one hand.

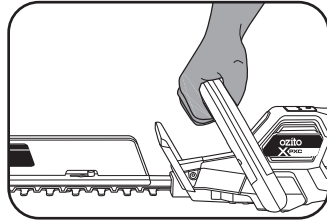

2. To start the hedge trimmer, squeeze the on/off trigger with the other hand.

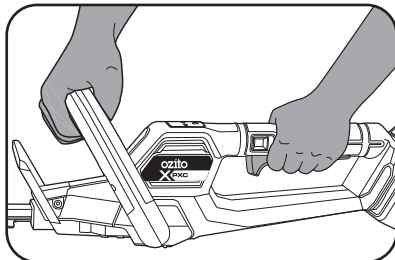

3. To stop operating, release the on/off trigger.

**Note:** If either the safety switch or on/off trigger is released, the hedge trimmer will stop operation.



**WARNING!** THE HEDGE TRIMMER MAY RUN FOR A FEW SECONDS AFTER IT HAS BEEN SWITCHED OFF. LET THE MOTOR COME TO A COMPLETE STANDSTILL BEFORE SETTING THE HEDGE TRIMMER DOWN.



**WARNING!** DO NOT OPERATE THE HEDGE TRIMMER WITH LONG LOOSE HAIR OR LOOSE FITTING JEWELLERY. TIE LONG LOOSE HAIR BACK AND REMOVE LOOSE FITTING JEWELLERY.



**WARNING!** ALWAYS USE THE HEDGE TRIMMER WITH BOTH HANDS. NEVER HOLD SHRUBS WITH ONE HAND AND OPERATE THE HEDGE TRIMMER WITH THE OTHER. FAILURE TO HEED THIS WARNING MAY RESULT IN SERIOUS INJURY.



**WARNING!** ENSURE THE BLADES DO NOT COME INTO CONTACT WITH ANY OBJECT MADE OF HARD MATERIAL THAT COULD DAMAGE THE BLADES, SUCH AS FENCING WIRE OR METAL PLANT SUPPORTS.

## 4. OPERATION

### Using the Hedge Trimmer



**WARNING!** ALWAYS WEAR APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT (PPE) WHEN USING THE HEDGE TRIMMER, SUCH AS STURDY, NON-SLIP FOOTWEAR, LONG TROUSERS, SAFETY GOGGLES AND GLOVES WHEN USING THE EQUIPMENT. NEVER USE EQUIPMENT BAREFOOT OR IN SANDALS.

 
The hedge trimmer is designed for trimming and shaping shrubs, bushes and hedges. The equipment is intended for private use i.e. for use in home and gardening environments. Public facilities, parks, sporting grounds, along roadways, or agriculture and forestry are excluded. Only use appliances which are in perfect working order.

**Note:** Do not use the hedge trimmer for cutting stems greater than  $\varnothing 24\text{mm}$ . Use the trimmer only for cutting normal shrubbery found around houses and buildings. Do not overload the appliance.



**> $\varnothing 24\text{mm}$**

- A hedge trimmer can be used to cut shrubs and bushes as well as hedges.
- To obtain the best cutting results, hold the hedge trimmer so that the cutter teeth are at an angle of approximately  $15^\circ$  in relation to the hedge.
- Maintain proper footing and balance. Do not overreach. You should have solid footing and balance at all times, always working away and in front of your body.
- Do not cut hedges when wet. (For best results are achieved when dry).
- The twin-bladed cutters rotate in opposite directions, thus enabling cutting in both directions.
- To ensure that you cut the hedge to a level height, we recommend tying a guide line of string or similar along the hedge. Cut off all branches that protrude beyond the guide line.

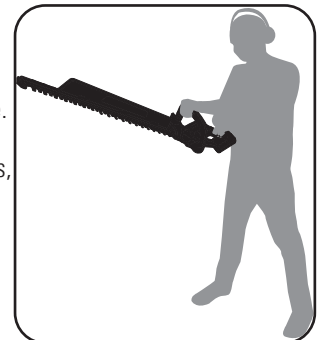

**WARNING!** CLEAR THE AREA TO BE CUT BEFORE EACH USE. REMOVE ALL OBJECTS, SUCH AS CORDS, LIGHTS, WIRE, OR STRING WHICH CAN BECOME ENTANGLED IN THE CUTTING BLADE AND CREATE A RISK OF SERIOUS PERSONAL INJURY.



**WARNING!** IF THE BLADE JAMS ON ANY ELECTRICAL CORD OR LINE, DO NOT TOUCH THE BLADE! IT CAN BECOME ELECTRICALLY LIVE AND VERY DANGEROUS. CONTINUE TO HOLD THE HEDGE TRIMMER BY THE INSULATED REAR HANDLE OR LAY IT DOWN AND AWAY FROM YOU IN A SAFE MANNER. DISCONNECT THE ELECTRICAL SERVICE TO THE DAMAGED LINE OR CORD BEFORE ATTEMPTING TO FREE THE BLADE. FAILURE TO HEED THIS WARNING MAY RESULT IN SERIOUS PERSONAL INJURY OR POSSIBLE DEATH.



**WARNING!** DO NOT OPERATE THE HEDGE TRIMMER IN A TREE, ON A LADDER, FROM A ROOFTOP, OR ANY UNSTABLE SUPPORT, THIS IS EXTREMELY DANGEROUS.

## Anti-Blocking System

The hedge trimmer features an anti-blocking system which overcomes blade blockages caused by branches. The blades move back and forth several times in order to cut through any jammed branches.


In the event a blockage cannot be overcome:

1. Stop the equipment.
2. Remove the battery.
3. Remove the jammed branch from the blade. Wear leather gloves to prevent injury.

## Top Cutting


**WARNING!** BE PARTICULARLY ATTENTIVE WHEN CUTTING ALONG THE GUIDE LINE. DO NOT CUT THROUGH THE GUIDE LINE. THIS COULD GET ENTANGLED IN THE BLADES AND LEAD TO INJURIES OR DAMAGE TO PROPERTY.

Use a wide sweeping motion, feed the blade teeth through the twigs. A slight downward tilt of the cutting blades in the direction of motion gives the best cutting results.

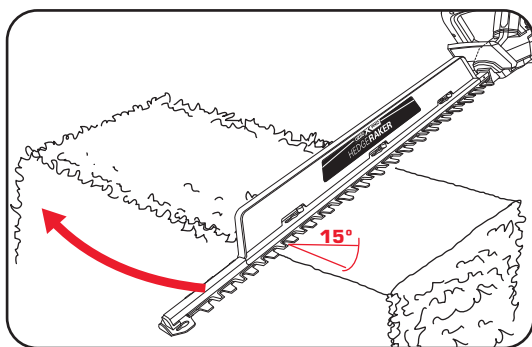

## Side Cutting

When trimming the sides of the hedge, begin at the bottom and cut upwards. Trim the side of a hedge so that it will be slightly narrower at the top. This shape will expose more of the hedge, resulting in a more uniform growth.

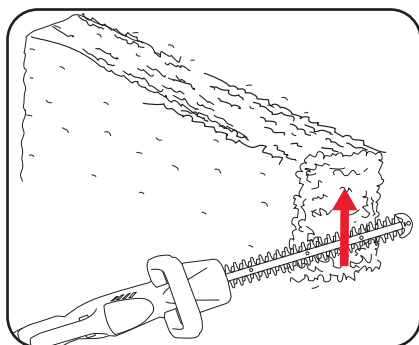

**Note:** Do not operate your hedge trimmer with dull or damaged blades. This may cause overload and will give unsatisfactory cutting results

# MAINTENANCE





**WARNING!** ALWAYS ENSURE THE HEDGE TRIMMER HAS COMPLETELY STOPPED AND THE BATTERY IS REMOVED PRIOR TO ANY MAINTENANCE.



**WARNING!** WHEN HANDLING THE BLADE ASSEMBLY, WEAR NON-SLIP, HEAVY-DUTY PROTECTIVE GLOVES. DO NOT PLACE YOUR HAND OR FINGERS BETWEEN BLADES OR IN ANY POSITION WHERE THEY COULD GET PINCHED OR CUT.

## Sharpening the blade

1. Start and stop your hedge trimmer until the cutter blade and the guard are slightly offset.
2. Remove the battery pack from your hedge trimmer.
3. Clamp the blade assembly in a vise and file the exposed cutting surface of each blade tooth. Remove as little material as possible.
4. Remove the hedge trimmer from the vise and insert the battery pack. Repeat steps 1-3 for the unsharpened edges of the blade teeth.

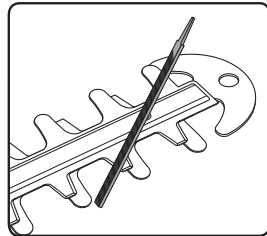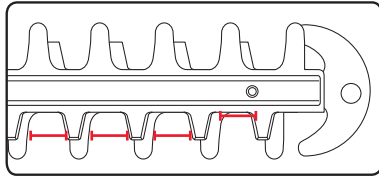


**Note:** Do not operate your hedge trimmer with dull or damaged cutting blades. This may cause overload and will give unsatisfactory cutting results.

## Lubricating the blade

The blade rail should be cleaned and treated with light machine oil or spray lubricant (such as WD40, CRC 5.56 or RP7) after each use. When a job lasts for a longer period of time it is recommended that the blade rail also be treated with spray lubricant at regular intervals during operation.

1. Remove the battery pack from the hedge trimmer.
2. Lay the hedge trimmer on a flat surface. Apply a light weight machine oil along the edge of the top blade or spray with a lubricant.

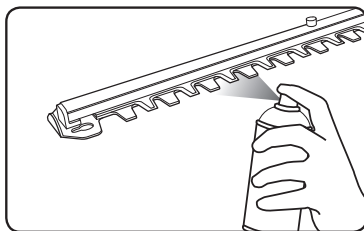

**WARNING!** DO NOT OIL WHILE THE HEDGE TRIMMER IS RUNNING.


## Cleaning

- We recommend that you clean the hedge trimmer immediately each time you have finished using it.
- Use a soft brush to remove debris from all air intakes and the cutting blade.
- To remove sap and other sticky residue, spray the blades with a resin solvent. Run the motor briefly so that the solvent is evenly distributed then wipe the surface with a dry cloth.
- Keep air intake clean and air vents free of debris to avoid overheating the motor.

- Never use water for cleaning your hedge trimmer. Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents. Use clean cloths to remove dirt, dust, oil, grease, etc.
- Keep away from corrosive agents such as garden chemicals.

## Storage

- Store the equipment and its accessories in a dark and dry place at above freezing temperature, out of children's reach. The ideal storage temperature is between 5°C and 30°C.
- Always place the blade cover on the blade before storing the hedge trimmer. Use caution to avoid the sharp teeth of the blade.
- When in storage remove the battery from the hedge trimmer.
- The Brushless Hedge Trimmer is equipped with an integrated wall holder, this enables it to be easily hung on a wall with a nail or screw when not in use for storage, with the blade cover fitted.

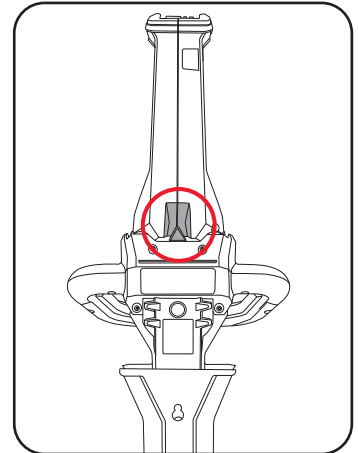

**WARNING!** STORE THE HEDGE TRIMMER IN A SAFE AND DRY PLACE OUT OF THE REACH OF CHILDREN.

## Transport

- Always place the blade cover on the blade before transporting the hedge trimmer. Use caution to avoid the sharp teeth of the blade.
- Remove the battery before transporting it.
- Protect the machine from damage and strong vibrations that can occur particularly when transporting in vehicles.









**Note:** Ozito Industries will not be responsible for any damage or injuries caused by the repair of the trimmer by an unauthorised person or by mishandling of the trimmer. This machine is designed for DIY use - use in commercial or industrial environments will void the warranty.

## TROUBLESHOOTING

Problem	Cause	Remedy
Hedge Trimmer is not starting.	Possible clogging.	Clean the trimmer blade of any leaves or debris.
	Battery is low in charge.	Charge battery.
	Battery not inserted properly.	Insert battery pack correctly.
Trimmer is not operating at full capacity.	Possible clogging.	Clean the trimmer blade of any leaves or debris.
Motor stops while trimming.	Battery has no power.	Charge battery.

- Sparking visible through the housing air vents. A small amount of sparking may be visible through the housing vents. This is normal and does not indicate a problem.
- If the trimmer vibrates abnormally, stop motor immediately. Abnormal vibration usually indicates a mechanical problem. Continued operation could lead to injury or damage.

## DESCRIPTION OF SYMBOLS

<b>V</b>	Volts	<b>Hz</b>	Hertz
<b>a.c./~</b>	Alternating current	<b>W</b>	Watts
<b>d.c./—</b>	Direct current	<b>IPX1</b>	Ingress protection from water
<b>Ah</b>	Amp hour	<b>∅</b>	Diameter
<b>mA</b>	Milliamperes	<b>n<sub>o</sub></b>	No load speed
<b>/min</b>	Revolutions or reciprocation per minute		Warning
<b>mm</b>	Millimetre		Wear ear & eye protection
	Regulatory compliance mark (RCM)		<b>Dander!</b> Moving blade. Keep body parts away from the blade
	Wear protective gloves		Do not use in the rain or leave the hedge trimmer outdoors while raining
	Read instruction manual to reduce the risk of injury		
	Sound pressure level 100dB		

## CARING FOR THE ENVIRONMENT



Power tools that are no longer usable should not be disposed of with household waste but in an environmentally friendly way. Please recycle where facilities exist. Check with your local council authority for recycling advice.



Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment. Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.

## SPARE PARTS

Spare parts can be ordered from the Special Orders Desk at your local Bunnings Warehouse.

For further information, visit [www.ozito.com.au](http://www.ozito.com.au) or contact Ozito Customer Service:

**Australia 1800 069 486**

**New Zealand 0508 069 486**

**E-mail: [hello@ozito.com.au](mailto:hello@ozito.com.au)**



# ELECTRICAL SAFETY



**WARNING!** When using electric machines, basic safety precautions, including the following, should always be followed to reduce risk of fire, electric shock, personal injury and material damage.

-Read the whole manual carefully and make sure you know how to switch the machine off in an emergency, before operating the machine. Save these instructions and other documents supplied with this machine for future reference.

-This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

-This appliance is compatible and only to be used with all batteries & chargers from the Ozito PXC range. Refer to the PXC battery and charger manuals for information regarding charging, use and storage.

-Remove the batteries from the appliance before being charged.

-Do not combine different types of batteries or new and used batteries.

-If the appliance is to be stored unused for a long period, the batteries should be removed.

-Do not use modified or damaged batteries.



# GENERAL MACHINE SAFETY WARNINGS



**WARNING!** Read all safety warnings, instructions, illustrations and specifications provided with this machine. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

**Save all warnings and instructions for future reference.**

The term "machine" in the warnings refers to your mains-operated (corded) machine or battery-operated (cordless) machine.

## 1) Work area safety

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate machines in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Machines create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a machine.** Distractions can cause you to lose control.

## 2) Electrical safety

- a) **Machine plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) machines.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose machines to rain or wet conditions.** Water entering a machine will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the machine. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a machine outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

## 3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a machine. Do not use a machine while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating machines may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the machine.** Carrying machines with your finger on the switch or energising machines that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the machine on.** A wrench or a key left attached to a rotating part of the machine may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the machine in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- h) **Do not let familiarity gained from frequent use of machines allow you to become complacent and ignore machine safety principles.** A careless action can cause severe injury within a fraction of a second.

## 4) Machine use and care

- a) **Do not force the machine. Use the correct machine for your application.** The correct machine will do the job better and safer at the rate for which it was designed.
- b) **Do not use the machine if the switch does not turn it on and off.** Any machine that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the machine before making any adjustments, changing accessories, or storing machines.** Such preventive safety measures reduce the risk of starting the machine accidentally.
- d) **Store idle machines out of the reach of children and do not allow persons unfamiliar with the machine or these instructions to operate the machine.** Machines are dangerous in the hands of untrained users.
- e) **Maintain machines and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the machine's operation. If damaged, have the machine repaired before use.** Many accidents are caused by poorly maintained machines.
- f) **Keep cutting machines sharp and clean.** Properly maintained cutting machines with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the machine, accessories and machine bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the machine for operations different from those intended could result in a hazardous situation.
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the machine in unexpected situations.

## 5) Battery machine use and care

- a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b) **Use machines only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.
- e) **Do not use a battery pack or machine that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- f) **Do not expose a battery pack or machine to fire or excessive temperature.** Exposure to fire or temperature above 130 °C may cause explosion.
- g) **Follow all charging instructions and do not charge the battery pack or machine outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

## 6) Service

- a) **Have your machine serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the machine is maintained.
- b) **Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service providers.



# HEDGE TRIMMER SAFETY WARNINGS



**WARNING!** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

**Young children should be supervised to ensure that they do not play with the appliance.**

• **Keep all parts of the body away from the blade. Do not remove cut material or hold material to be cut when blades are moving.** Blades continue to move after the switch is turned off. A moment of inattention while operating the hedge trimmer may result in serious personal injury.

• **Carry the hedge trimmer by the handle with the blade stopped and taking care not to operate any power switch.** Proper carrying of the hedge trimmer will decrease the risk of inadvertent starting and resultant personal injury from the blades.

• **When transporting or storing the hedge trimmer, always fit the blade cover.** Proper handling of the hedge trimmer will decrease the risk of personal injury from the blades.

• **When clearing jammed material or servicing the unit, make sure all power switches are off and the battery pack is removed or disconnected.** Unexpected actuation of the hedge trimmer while clearing jammed material or servicing may result in serious personal injury.

• **Hold the hedge trimmer by insulated gripping surfaces only, because the blade may contact hidden wiring.** Blades contacting a "live" wire may make exposed metal parts of the hedge trimmer "live" and could give the operator an electric shock.

• **Keep all power cords and cables away from cutting area.** Power cords or cables may be hidden in hedges or bushes and can be accidentally cut by the blade.

• **Do not use the hedge trimmer in bad weather conditions, especially when there is a risk of lightning.** This decreases the risk of being struck by lightning.

• Never allow children or people unfamiliar with these instructions to use the Hedge Trimmer.

• Avoid using the Hedge Trimmer, while people, especially children or pets, are nearby.

• Use the Hedge Trimmer only in daylight or good artificial light.

• Never operate the Hedge Trimmer with damaged guards or without guards in place.

• Switch on the Hedge Trimmer only when the hands and feet are away from the cutting blades.

• Use only the manufacturer's recommended replacement parts and accessories.

• Always remove the battery from the Hedge Trimmer when leaving the Hedge Trimmer unattended.

• Always remove the battery from the Hedge Trimmer before carrying out maintenance or cleaning work.

• Inspect and maintain the Hedge Trimmer regularly. Have the Hedge Trimmer repaired only by an authorized repairer.

• When not in use, store the Hedge Trimmer out of the reach of children.

• Face the cutting blades away from yourself, other people and animals while the power is connected to the Hedge Trimmer (especially during operation).

• Use both handles at all times.

• Keep ventilation openings clear of debris. Keep handles dry, clean and free of oil and grease.

• Never reach underneath the Hedge Trimmer (the cutting blade area) until it has completely stopped and the power has been disconnected.

• Do not get distracted and always concentrate on what you are doing. Use common sense. Never operate the machine when you are tired, sick or under the influence of alcohol or other drugs.

• Do not operate this appliance with long loose hair or loose fitting jewellery. Tie long loose hair back and remove loose fitting jewellery.

• Avoid using power tools and machines for long periods of time without breaks. Vibration from tools and machines can be transmitted into your hands and arms.



**WARNING!** When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage. To ensure safety and reliability, all repairs should be performed by a qualified service technician.



**Danger!** Always remove the battery from the hedge trimmer:

- when the equipment is left unattended,
- when the equipment is being checked, cleaned, or having maintenance work done,
- after striking a foreign object. Inspect the appliance for damage and make repairs as necessary.
- before clearing a blockage,
- or if the equipment vibrates abnormally.