

Garden Shredder

Quick Set-Up Guide

Using the Garden Shredder

Easy Steps to getting Started

- 1 **Unpack the Garden Shredder:**
 - a) Open carton carefully and remove all items.
 - b) Ensure you have all items before you discard the packaging.
- 2 **Assemble unit:**

To assemble this unit please refer to the user guide.
- 3 **Now you have assembled the unit please ensure the collection box is fully in place and locked in position. This will engage the safety switch.**
- 4 **Now you are ready to use the unit please check the cable is securely connected to the unit.**

Please remember max size of branches is 40 mm.

The Cutter/Counter blade setting is pre set at factory and should not need any initial adjustment.

However, please ensure that the Cutter blade / Counter blade gap setting is correct at all times (0.5 to 1.0mm) – if not this may result in the unit not functioning correctly. If necessary adjustment can be made via the adjusting button.

IMPORTANT!

Please do not over adjust the adjusting button so the Counter blade meets the cutter as this will damage the blade (refer to user guide).

