



Einhell

CLASSIC



Cordless Jig Saw

TC-JS 18/80 Li-solo

Item No.: 4321238

Ident No.: 21013

Bar Code: 4006825673609

The Einhell Cordless Jigsaw TC-JS 18/80 Li-solo ensures fast and precise cuts. Its freedom from cables means it can be used far from power outlets in the home, workshop and garage. Since it is a member of the Power X-Change system family, the batteries can be used in any device from the series. The excellent running smoothness ensures precise cuts, and the pendulum stroke can be switched on for quick cuts. The saw blade holder facilitates tool-free changes. The dust blower function ensures a perfect view. The integrated plastic glide insert protects delicate workpieces. The set includes one saw blade for wood. The product does not include a battery or charger.

Features & Benefits

 
 
- Part of the Power X-Change family, 1x 18 V battery required
- Very smooth operation for precise cutting
- Switchable pendulum stroke for fast cuts
- Tool-free saw blade attachment
- Dust blow-off function for best view of the working area
- Plastic shoe cover protects delicate workpieces
- Incl. 1x jigsaw blade for wood
- Supplied without battery and charger (sold separately)

Technical Data

- | | |
|--------------------------------|------------------------|
| - No-load speed (idle speed) | 2700 min ⁻¹ |
| - Stroke height | 20 mm |
| - Cutting depth in wood | 80 mm |
| - Cutting depth in plastic | 12 mm |
| - Cutting depth in steel | 10 mm |
| - Max. bevel cuts | 45 ° |
| - Toolless saw blade change | yes |

Logistic Data

- | | |
|--------------------------------------|-------------------|
| - Product weight | 1.62 kg |
| - Gross weight single packaging | 1.87 kg |
| - Dimensions single packaging | 240 x 90 x 215 mm |
| - Pieces per export carton | 5 Pieces |
| - Gross weight export carton | 11 kg |
| - Container quantity (20"/40"/40"HC) | 4910 10000 |

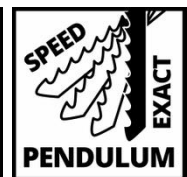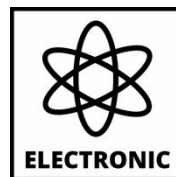

Available as special accessories



4-6 Ah Multi-Ah Power X-Change Plus Battery
Item No.: 4511502
Bar Code: 4006825644210



4,0 Ah Power X-Change Battery
Item No.: 4511396
Bar Code: 40068256410376
Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory




Power X-Car Charger 3A Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



Power X-Boostcharger 6A Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



 5,2 Ah Power X-Change Plus Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Stich-Sägeblatt Box 10-tlg. T Stichsäge-Zubehör
Item No.: 49617350
Bar Code: 4009316173503
Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 2,5Ah Power X-Change Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Twincharger 3A Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1 Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



18V 3,0 Ah Power-X-Change 2 Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



3,0 Ah Power X-Change Plus Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



St-Sägebl.Set 4tg Ho/Met Akku Stichsäge-Zubehör
Item No.: 49625427
Bar Code: 4009316254271
Einhell Accessory



2,0 Ah Power X-Change Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory