

QUICK START GUIDE

Easy steps to getting started.

1. Ensure all items, including your manual are removed from the packaging before discarding.
2. Check the tension of the chain and adjust if necessary (refer to section 5.3 in the instruction manual).
3. Fuel the chainsaw using unleaded fuel and 2 Stroke oil to a ratio of 35:1. Fill the fuel tank (A) with correct fuel mixture (Fig. 11).
4. Fill the oil tank (B) with chain oil (Fig. 11).
5. Be certain the chain brake is disengaged (C) before starting unit (Fig. 11).
6. Once you have filled the chain and oil tank, tighten the tank cover securely by hand. Do not use any tools to do so.
7. Set the On/Off switch (A) to "On (I)" to start the machine (Fig. 12A).
8. Pull out the choke (B) (Fig. 12B) until it locks.
9. Push the primer bulb (C) 10 times (Fig. 12C).
10. Place saw on a firm, flat surface. Hold saw firmly as shown. Pull starter rapidly 2 times. Beware of moving chain!
11. Push in the choke (B) as far as it will go (Fig. 12B).
12. Hold saw firmly and pull starter rapidly 4 times. Engine should start (Fig. 12).
13. Let the engine run for 10 seconds to warm up. Press the throttle trigger (D) briefly, the engine will go to "idling" speed (Fig. 12E).
14. To stop engine release trigger and allow engine to return to idle speed.
15. Move STOP switch down to stop engine.
16. Check to ensure that the working environment is safe as prescribed in the instruction manual.



17. IF YOU ARE IN ANY DOUBT PLEASE REFER TO THE DETAILED INSTRUCTIONS WITHIN OUR MANUAL.

