



Einhell

EXPERT

POWER X-CHANGE

Cordless Lawn Edge Trimmer

GE-LE 18/190 Li-Solo

Item No.: 3424300

Ident No.: 21034

Bar Code: 4006825651287

The Einhell GE-LE 18/190 Li-Solo cordless lawn edge trimmer is a member of the clever PXC family. For precise results between 29.5 mm to 38 mm there is an adjustable depth setting facility with 3 levels. The twin-bladed cutter delivers perfect results when cutting borders, and exact progress along the lawn is assured by the rollers at the front/back. The soft grip guarantees optimum handling and ergonomics. The adjustable additional handle ensures that the cordless lawn edge trimmer can be guided precisely and safely. The split shaft makes it easy to transport and stow away in minimum space. 1 x 18 V PXC rechargeable battery is needed for operation. The product is supplied without a battery or charger which are available separately.

Features & Benefits

- Member of the Power X-Change family, 1x18V battery necessary
- 3-steps cutting depth adjustment for precise results (29.5-38 mm)
- Double cutting blade delivering perfect cutting of the edges
- Split Shaft - easy transport and space-saving storage
- Softgrip ensuring perfect handling and ergonomics
- Adjustable additional handle - easy and safe handling
- Guide wheels (front/back) providing accurate working progress
- Knife protection cover guarantee full safety while working
- Supplied without battery and charger (available separately)

Technical Data

- Min. cutting depth 29.5 mm
- Max. cutting depth 38 mm
- cutting depth adjustment 3 settings

Logistic Data

- Product weight (kg) 2.95
- Gross weight (kg) 4.7
- Dimensions single packaging 950 x 310 x 185 mm
- Pieces per export carton 2 Pieces
- Gross weight of export carton 10.06 kg
- Dimensions export carton 940 x 315 x 375 mm
- Container quantity (20"/40"/40"HC) 504 | 1032 | 1152



CENTRAL DEPTH ADJUSTMENT



 
 
SPLIT SHAFT



GUIDE WHEELS



DUAL CUT

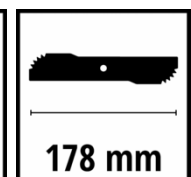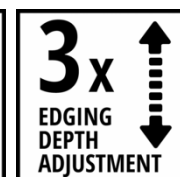

Available as special accessories



Spare Blade GE-LE 18/190 Li
Lawn Trimmer Accessory
Item No.: 3405101
Bar Code: 4006825653533
Einhell Accessory



PXC Battery Mounting Gadget
PXC-Battery Accessory
Item No.: 4514155
Bar Code: 4006825658774
Einhell Accessory



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC+ 18V 5-8Ah MULTI
Battery
Item No.: 4511600
Bar Code: 400682565055
Einhell Accessory



3,0 Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



4,0 Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



4-6 Ah Multi-Ah Power X-Change
Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
B1
Battery
Item No.: 4511489
Bar Code: 4006825638578



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



18V 4,0Ah PXC Starter Kit B1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory

Battery-Running-Times

One Battery for All	 trimming ¹ (min.)
1.5 Ah	20
2.0 Ah	25
2.5 Ah	33
3.0 Ah	45
4.0 Ah	55
5.2 Ah	65
6.0 Ah	75
8.0 Ah	110

Test setup:

1) lawn