



Einhell

EXPERT

POWER X-CHANGE

Cordless All Purpose Saw

TE-AP 18/22 Li-Solo

Item No.: 4326300

Ident No.: 21043

Bar Code: 4006825601381

The TE-AP 18/22 Li-Solo cordless universal saw is a particularly light and handy saw and a versatile tool. It demonstrates its strong points on a wide spectrum of sawing jobs, whether at the construction site, in the workshop, or in the garden. The tool is supplied without a battery and charger, but it can be powered by Power X-Change rechargeable batteries.

Features & Benefits

- Member of the Power X-Change family
- Versatile: Building site - workshop - garden
- The smallest universal saw of its class
- Blade change without tools
- Adjustable soleplate for optimum blade use
- Ergonomic softgrip surfaces
- Rubber supports to protect the housing
- Supplied without battery and charger (available separately)
- Incl. saw blade for wood



Technical Data

- | | |
|-----------------------------|------------------------|
| - Number of strokes | 2600 min ⁻¹ |
| - Stroke height | 22 mm |
| - Cutting depth in wood | 100 mm |
| - Cutting depth in steel | 6 mm |
| - Toolless saw blade change | yes |

Logistic Data

- | | |
|--------------------------------------|---------------------|
| - Product weight | 1.59 kg |
| - Gross weight single packaging | 2.18 kg |
| - Dimensions single packaging | 423 x 85 x 166 mm |
| - Pieces per export carton | 6 Pieces |
| - Gross weight export carton | 13.7 kg |
| - Dimensions export carton | 430 x 260 x 352 mm |
| - Container quantity (20"/40"/40"HC) | 4260 8838 10200 |



Available as special accessories



4-6 Ah Multi-Ah Power X-Change Plus Battery
Item No.: 4511502
Bar Code: 4006825644210



4,0 Ah Power X-Change Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Twincharger 3A Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



5,2 Ah Power X-Change Plus Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



3,0 Ah Power X-Change Plus Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 4,0Ah PXC Starter Kit A1 PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



Power X-Fastcharger 4A Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



18V 3,0 Ah Power-X-Change 1 Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB A1 Battery
Item No.: 4511489
Bar Code: 4006825638578



18V 4,0Ah Power-X-Change Plus Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



2,0 Ah Power X-Change Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory