



**850W**  
**ELECTRIC PLANER**  
RT-PL-82

# QUICK START GUIDE

Easy steps to getting started.

1. Ensure all items, including your user guide are removed from the packaging before discarding.
2. For safety reasons, the electric planer must not be operated with the storage compartment for accessories (9) inserted.
3. To adjust the chip depth, turn the setting knob for the chip depth (1) in a clockwise direction to set a greater chip depth and counter-clockwise direction to set a lower chip depth. After finishing work, turn the setting knob for the chip depth to position "0".
4. Slide the supplied dust bag into the adaptor for the chip ejector (7) and connect it on either the left or right side of the planer. Please refer to Section 6.2 of the User Guide for more information.
5. Use the parallel stop when you want to plane parallel to the edge of the workpiece. For detailed instruction, please refer to Section 6.3 of the User Guide.
6. To switch on the tool press the safety lockoff (3) from either side of the planer and press the ON/ OFF switch (4). Release the ON/ OFF switch (4) to switch off the electric planer.
7. For some practical tips on planning, please refer to Section 7.2 of the User Guide.
- 8. IF YOU ARE IN ANY DOUBT PLEASE REFER TO THE DETAILED INSTRUCTIONS WITHIN OUR USER GUIDE .**

