



Einhell

CLASSIC

POWER X-CHANGE

CI Pole-Mounted Powered Pruner

GC-LC 18/20 Li T-Solo

Item No.: 3410581

Ident No.: 21025

Bar Code: 4006825652123

The Einhell GC-LC 18/20 Li T-Solo cordless pole-mounted pruner is a member of the Power X-Change series. The product is supplied without a battery or charger which are available separately. The pole-mounted pruner is equipped with a high-quality rail and chain, a chain catch bolt and a durable metal gear unit and a metal claw stop. The oil reservoir provides automatic chain lubrication. The motor head has a 30° tilt angle and in combination with the extension pole the pole-mounted pruner can be used with flexibility. The additional rubberized holding area provides for ergonomic handling, and the pruner also has a harness.

Features & Benefits


- Motor head with 30° tilt angle
- Extension pole for reaching higher branches
- Additional rubberized holding area for ergonomic handling
- High-quality rail and chain
- Metal gearing for long life
- Claw stop made of metal
- Chain catch bolt
- Carrying belt
- Oil tank for automatic chain lubrication

Technical Data

- Sword length	200 mm
- Cutting length	19.5 cm
- Cutting speed	5.5 m/s
- Capacity of oil tank	70 mL
- Length of telescope bar	2.03 - 2.87 m

Logistic Data

- Product weight	2.8 kg
- Gross weight single packaging	5.2 kg
- Dimensions single packaging	256 x 128 x 1130 mm
- Pieces per export carton	3 Pieces
- Gross weight export carton	16.7 kg
- Dimensions export carton	1150 x 395 x 270 mm
- Container quantity (20"/40"/40"HC)	672 1392 1632

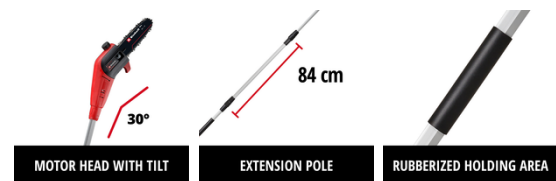

Available as special accessories



Ersatzkette 20cm 1,1 33T 3/8
Chain Saw Accessory
Item No.: 4500193
Bar Code: 4006825664577
Einhell Accessory



spare chain 20cm 1,1 33T 3/8
Chain Saw Accessory
Item No.: 4500186
Bar Code: 4006825689327
Einhell Accessory



spare bar 20cm 1,1
Chain Saw Accessory
Item No.: 4500166
Bar Code: 4006825689334
Einhell Accessory



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



3,0 Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



4,0 Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



4-6 Ah Multi-Ah Power X-Change
Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210



PXC 18V 2,5Ah
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 4,0Ah PXC Starter Kit C1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory

Battery-Running-Times

One Battery for All



cutting¹
(pieces)

One Battery for All	cutting ¹ (pieces)
1.5 Ah	37
2.0 Ah	50
2.5 Ah	65
3.0 Ah	75
4.0 Ah	100
5.2 Ah	130
6.0 Ah	155
8.0 Ah	200

For best performance select a battery with at least 2.5 Ah

Test setup:

1) softwood - scantling 70x70 mm