



# Einhell

# EXPERT

## POWER X-CHANGE

Robot Lawn Mower

**FREELEXO 400 BT**

**Item No.: 3413948**

Ident No.: 21021

Bar Code: 4006825657678

The Einhell FREELEXO 400 BT robot lawnmower is a member of the high-performance Power X-Change family which provides unlimited flexibility within the system family. It is controlled via app by Bluetooth and the settings of the robot lawnmower can be set to individual requirements. In addition, it has an intuitive keypad. Using the application the operating time of the Einhell FREELEXO can be precisely programmed for each specific day. The FREELEXO 400 BT includes everything needed for installation and operation of an Einhell robotic lawnmower of the FREELEXO Series. It is suitable for a lawn area up to 400 m<sup>2</sup>. The scope of delivery includes a 2,5 Ah battery, 120 m wire, 170 fastening hooks, 3 blades and 4 connecting clamps.

## Features & Benefits

- PXC system battery - can also be used for other PXC products
- App using Bluetooth - user-defined robot lawnmower control
- Multi area mowing - for complex gardens
- Intuitive keypad
- Programmable operating time for each specific day
- Safety sensor system thanks to impact, tilt and lift sensors
- Anti-theft protection in form of PIN code and warning signal
- Rain sensor
- Cutting height adjustment (20-60mm)
- Suitable for slopes up to 35%
- Carry-handle for comfortable transport
- Automatic return to charging unit and charging
- Lawn areas up to 400 m<sup>2</sup>
- Incl. 2,0 Ah PXC Battery
- Wire 120 m
- Fastening hooks 170 pcs.
- Blades 3 pcs.
- Connecting clamps 4 pcs.



## Technical Data

- |                             |                          |
|-----------------------------|--------------------------|
| - Power                     | 18 V                     |
| - Battery                   | 18 V   2000 mAh   Li-Ion |
| - Cutting width             | 18 cm                    |
| - Slope                     | 35 %                     |
| - Cutting height adjustment | 20 mm - 60 mm            |
| - Recommended area          | 400 m <sup>2</sup>       |
| - Perimeter wire            | 120 m                    |
| - Hooks                     | 170 Pieces               |
| - Spare blades              | 3                        |
| - Connecting clamps         | 4 Pieces                 |

## Logistic Data

- |  |                    |
|--|--------------------|
| - Product weight (kg)                  | 14.4               |
| - Gross weight (kg)                    | 18                 |
| - Dimensions single packaging          | 727 x 526 x 321 mm |
| - Pieces per export carton             | 1 Pieces           |
| - Gross weight of export carton        | 18 kg              |
| - Dimensions export carton             | 737 x 530 x 327 mm |
| - Container quantities (20"/40"/40"HC) | 224   462   528    |



## Available as special accessories



Power X-Boostcharger 6A  
Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory



2x 3,0Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512083  
Bar Code: 4006825638509  
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus  
Battery  
Item No.: 4511502  
Bar Code: 4006825644210  
Einhell Accessory



18V 2,5Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



Installation Kit 500m2  
Robot Lawn Mower Accessory  
Item No.: 3414010  
Bar Code: 4006825646863  
Einhell Accessory



Installation Kit 800m2  
Robot Lawn Mower Accessory  
Item No.: 3414011  
Bar Code: 4006825646870  
Einhell Accessory



Installation Kit 1200m2  
Robot Lawn Mower Accessory  
Item No.: 3414012  
Bar Code: 4006825646887  
Einhell Accessory



18V 2,0Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V 4,0Ah Power X-Change 1  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



Spare blades 12 psc  
Robot Lawn Mower Accessory  
Item No.: 3414020  
Bar Code: 4006825648775  
Einhell Accessory



Perimeter wire 50 m  
Robot Lawn Mower Accessory  
Item No.: 3414021  
Bar Code: 4006825648782  
Einhell Accessory



Connecting clamps 4 psc  
Robot Lawn Mower Accessory  
Item No.: 3414022  
Bar Code: 4006825648799  
Einhell Accessory



Fastening hook 100 psc  
Robot Lawn Mower Accessory  
Item No.: 3414023  
Bar Code: 4006825648805  
Einhell Accessory



2x2 Power X-Quattrocharger 4A  
Charger  
Item No.: 4512102  
Bar Code: 4006825649536  
Einhell Accessory



18V 2,5Ah Power X-Change  
Battery  
Item No.: 4511516  
Bar Code: 4006825650518  
Einhell Accessory



Power X-Fastcharger 4A  
Charger  
Item No.: 4512103  
Bar Code: 4006825650228  
Einhell Accessory



18V 5,2Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



2x 5,2Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512108  
Bar Code: 4006825652376  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



robot lawn mower garage  
Robot Lawn Mower Accessory  
Item No.: 3414024  
Bar Code: 4006825654417  
Einhell Accessory



18V Battery Charger 3,0A - PXC  
Charger  
Item No.: 4514095  
Bar Code: 4006825655292  
Einhell Accessory



Power X-Car Charger 3A  
Charger  
Item No.: 4512113  
Bar Code: 4006825655377  
Einhell Accessory



2x 4,0Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512112  
Bar Code: 4006825655766  
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB  
Battery  
Item No.: 4511524  
Bar Code: 4006825656206  
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack  
Battery  
Item No.: 4511526  
Bar Code: 4006825656695  
Einhell Accessory



5,2Ah & 4A Fastcharger  
PXC-Starter-Kit  
Item No.: 4512114  
Bar Code: 4006825656787  
Einhell Accessory



Cleaning Kit  
Robot Lawn Mower Accessory  
Item No.: 3414025  
Bar Code: 4006825657951  
Einhell Accessory



Repair Kit  
Robot Lawn Mower Accessory  
Item No.: 3414026  
Bar Code: 4006825657968  
Einhell Accessory



18V 2,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory



18V 3,0Ah Power X-Change Plus  
Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1  
Battery  
Item No.: 4511489  
Bar Code: 4006825638578  
Einhell Accessory



18V 4,0Ah Power-X-Change Plus  
Battery  
Item No.: 4511553  
Bar Code: 4006825660869  
Einhell Accessory



18V 3,0 Ah Power-X-Change 2  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory