



Einhell

EXPERT

POWER X-CHANGE

Cordless All Purpose Saw

TE-AP 18/26 Li - Solo

Item No.: 4326290

Ident No.: 21010

Bar Code: 4006825660012

The Einhell universal cordless saw TE-AP 18/26 Li - Solo is perfect for a wide range of applications – whether in the workshop, in the garden, or on a construction site. The tool is a member of the PXC family, so the batteries offer the freedom of cordless operation. With the anti-vibration function, even long tasks are comfortable, and the soft grip surfaces ensure ergonomic handling at all times. The cutting base plate is adjustable, which ensures optimum utilization of the saw blade (cutting depth in wood 180 mm / steel 12 mm). For faster working, the saw blade can be changed without the need for special tools. The unit is supplied with one high-quality saw blade (for wood). The rechargeable battery and charger are available separately.

Features & Benefits

- A member of the Power X-Change family
- Anti-vibration function ensures low vibration during operation
- Adjustable soleplate for optimum blade use
- Tool-less blade changes for rapid application
- Ergonomic handling thanks to soft grip surfaces
- Supplied without battery and charger (available separately)
- Incl. high quality sawblade (wood)



Technical Data

- Number of strokes 0 - 2600 min⁻¹
- Stroke height 26 mm
- Cutting depth in wood 180 mm
- Cutting depth in plastic 20 mm
- Cutting depth in steel 12 mm
- Toolless saw blade change yes

Logistic Data

- Product weight 2.14 kg
- Gross weight single packaging 2.58 kg
- Dimensions single packaging 426 x 91 x 167 mm
- Pieces per export carton 6 Pieces
- Gross weight export carton 16 kg
- Dimensions export carton 570 x 435 x 190 mm
- Container quantity (20"/40"/40"HC) 3720 | 7740 | 8400



Available as special accessories



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



Sabersaw-bl. set 3pc W/M Batt
All Purpose Saw Accessory
Item No.: 49576105
Bar Code: 4009315761053
KWB by Einhell



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB
Battery
Item No.: 4511524
Bar Code: 4006825656206
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory

Battery-Running-Times



sawing¹
(number of)

One Battery for All

1.5 Ah	155
2.0 Ah	207
2.5 Ah	260
3.0 Ah	311
4.0 Ah	414
5.2 Ah	572
6.0 Ah	640
8.0 Ah	854

Test setup:

1) softwood - round soft wood Ø 35 mm