



Einhell

CLASSIC

POWER X-CHANGE

Cordless Lawn Trimmer GC-CT 18/2411 Li P-Solo

Item No.: 3411115

Ident No.: 21014

Bar Code: 4006825680409

The cordless lawn trimmer GC-CT 18/2411 Li P is a lightweight among trimmers. As part of the Power X-Change family, it can be used in combination with any battery or charger from the system. For lawn care in hard-to-reach areas and for trimming lawn edges, the motor head can be rotated by 180° thanks to the edging function. Weighing only 1.39 kg and featuring an ergonomic design with an additional handle, the trimmer is particularly easy to handle. 20 additional plastic blades are included in the delivery. The specially designed blade holder prevents the blades from breaking and allows easy changing. The battery and charger are not included.

Features & Benefits

- Member of the Power X-Change family, 1 x 18 V battery required
- 180° rotatable motor head: For vertical surfaces/lawn edges
- Additional handle for safe two-hand guidance
- Ergonomic design for comfortable, back-friendly use
- Housing made of impact-resistant, robust plastic
- Pistol shape for convenient handling
- Stable blade holder for longer blade life
- Incl. 20x plastic knife
- Delivery without battery or charger (available separately)

Technical Data

- | | |
|--------------------------|-----------|
| - Revolutions of knife | 8750 rpm |
| - Cutting width of knife | 24 cm |
| - Number of knives | 20 Pieces |

Logistic Data

- | | |
|---------------------------------|--------------------|
| - Product weight | 1.393 kg |
| - Gross weight single packaging | 1.873 kg |
| - Dimensions single packaging | 188 x 157 x 491 mm |
| - Pieces per export carton | 8 Pieces |
| - Gross weight export carton | 17.8 kg |
| - Dimensions export carton | 635 x 505 x 385 mm |



POWER X-CHANGE
BATTERY & CHARGER
NOT INCLUDED



ADDITIONAL HANDLE



EASY HANDLING



EDGING FUNCTION




INNOVATIVE
KNIFE TECHNOLOGY


POWER X-CHANGE
BATTERY & CHARGER
NOT INCLUDED



 18 V

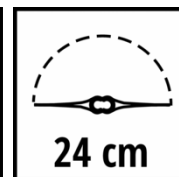

24 cm

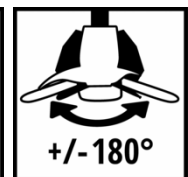 

+/- 180°

Available as special accessories



PXC Battery Mounting Gadget
PXC-Battery Accessory
Item No.: 4514155
Bar Code: 4006825658774
Einhell Accessory



Spareknife-Set GE-CT 18/25 Li
Lawn Trimmer Accessory
Item No.: 3405738
Bar Code: 4006825681130
Einhell Accessory



Spareknife-Box GE-CT 18/25 Li
Lawn Trimmer Accessory
Item No.: 3405739
Bar Code: 4006825681147
Einhell Accessory



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC+ 18V 5-8Ah MULTI
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



PXC+ 18V 4,0Ah SEALED
Battery
Item No.: 4511627
Bar Code: 4006825673227
Einhell Accessory



PXC+ 18V 4,0Ah
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



PXC+ 18V 3,0Ah SEALED
Battery
Item No.: 4511618
Bar Code: 4006825672794
Einhell Accessory



PXC 18V 3,0Ah
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



3,0 Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



4,0 Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



4-6 Ah Multi-Ah Power X-Change
Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



18V 4Ah PXC Plus Twinpack
Battery
Item No.: 4511629
Bar Code: 4006825673685
Einhell Accessory



18V 3Ah PXC Plus Twinpack
Battery
Item No.: 4511631
Bar Code: 4006825673692
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
B1
Battery
Item No.: 4511489
Bar Code: 4006825638578



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



Power X-Boostcharger 8A
Charger
Item No.: 4512155
Bar Code: 4006825670554
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 4,0Ah PXC Starter Kit A1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory

Battery-Running-Times



One Battery for All

trimming¹
(min.)

1.5 Ah	36
2.0 Ah	49
2.5 Ah	61
3.0 Ah	73
4.0 Ah	98
5.2 Ah	127
6.0 Ah	146
8.0 Ah	196

Test setup:

1) lawn - knife