

## Important user information for Einhell cordless hedge trimmers

The best tools for our customers is our commitment.

In case of doubt, we therefore rather go one step far than hesitate.

In exceptional cases, our battery hedge trimmers with this front handle do not switch on and off as usual.



We ask you to stop using it immediately if you feel that the switch does not move back to the off position!

This handle was fitted to the following machines:

GE-CH 18/60 (item number 3410930)

GE-CH 36/61, (item number 3410965)

Arcurra 18/55 (item number 3410920)

Please contact our customer service. We will then send you a new handle.

Einhell Germany AG  
Wiesenweg 22  
94405 Landau an der Isar  
Germany