



Einhell

EXPERT

POWER X-CHANGE

Garden Tool Kit

FREELEXO 500 BT Kit

Item No.: 3413945

Ident No.: 21021

Bar Code: 4006825655315

The Einhell FREELEXO 500 BT Kit robot lawnmower is a member of the high-performance Power X-Change family which provides unlimited flexibility within the system family. It is controlled via app by Bluetooth and the settings of the robot lawnmower can be set to individual requirements. In addition, it has an intuitive keypad. Using the app the operating time of the Einhell FREELEXO can be precisely programmed for each specific day. The FREELEXO 500 BT Kit includes everything needed for installation and operation of an Einhell robotic lawnmower of the FREELEXO Series. It is suitable for a lawns up to 500 m² and includes a 2,5 Ah battery, 130 m wire, 190 fastening hooks, 3 blades and 4 connecting clamps, a fast charger and a lawn trimmer.

Features & Benefits


- PXC system battery - can also be used for other PXC products
- App using Bluetooth - user-defined robot lawnmower control
- Multi area mowing - for complex gardens
- Intuitive keypad
- Programmable operating time for each specific day
- Safety sensor system thanks to impact, tilt and lift sensors
- Anti-theft protection in form of PIN code and warning signal
- Rain sensor
- Cutting height adjustment (20-60mm)
- Suitable for slopes up to 35%
- Carry-handle for comfortable transport
- Automatic return to charging unit and charging
- Lawn areas up to 500 m²
- Incl. 2,5 Ah PXC Battery
- Incl. fast charger
- Incl. cordless lawn trimmer GC-CT 18-24 Li P
- Wire 130 m
- Fastening hooks 190 pcs.
- Blades 3 pcs.
- Connecting clamps 4 pcs.



Technical Data

Logistic Data

- | | |
|-------------------------------|--------------------|
| - Gross weight export carton | 21.2 kg |
| - Dimensions single packaging | 837 x 521 x 322 mm |
| - Dimensions Export Carton | 845 x 525 x 326 mm |

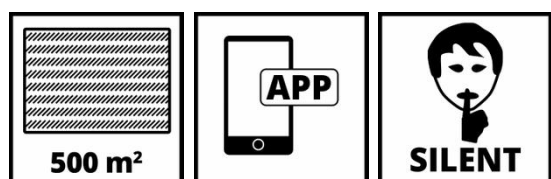

Available as special accessories



Spare Blade-set PXC Trimmer
Lawn Trimmer Accessory
Item No.: 3405730
Bar Code: 4006825560404
Einhell Grey



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



Spare Blade-box PXC trimmer
Lawn Trimmer Accessory
Item No.: 3405736
Bar Code: 4006825646283
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



Installation Kit 500m2
Robot Lawn Mower Accessory
Item No.: 3414010
Bar Code: 4006825646863
Einhell Accessory



Installation Kit 800m2
Robot Lawn Mower Accessory
Item No.: 3414011
Bar Code: 4006825646870
Einhell Accessory



Installation Kit 1200m2
Robot Lawn Mower Accessory
Item No.: 3414012
Bar Code: 4006825646887
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



Spare blades 12 psc
Robot Lawn Mower Accessory
Item No.: 3414020
Bar Code: 4006825648775
Einhell Accessory



Perimeter wire 50 m
Robot Lawn Mower Accessory
Item No.: 3414021
Bar Code: 4006825648782
Einhell Accessory



Connecting clamps 4 psc
Robot Lawn Mower Accessory
Item No.: 3414022
Bar Code: 4006825648799
Einhell Accessory



Fastening hook 100 psc
Robot Lawn Mower Accessory
Item No.: 3414023
Bar Code: 4006825648805
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



2x 5,2Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



robot lawn mower garage
Robot Lawn Mower Accessory
Item No.: 3414024
Bar Code: 4006825654417
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 4,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB
Battery
Item No.: 4511524
Bar Code: 4006825656206
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



5,2Ah & 4A Fastcharger
PXC-Starter-Kit
Item No.: 4512114
Bar Code: 4006825656787
Einhell Accessory



Repair Kit
Robot Lawn Mower Accessory
Item No.: 3414026
Bar Code: 4006825657968
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



Cleaning Kit
Robot Lawn Mower Accessory
Item No.: 3414025
Bar Code: 4006825657951
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



18V 4,0Ah Power-X-Change Plus
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory