







Surface Brush Accessory

Reinigungspad Set

Item No.: 3424134

Ident No.: 21013

Bar Code: 4006825673128

The Original Einhell cleaning pad set is a suitable accessory or spare part for the Einhell cordless surface brush PICOBELLA 18/90. The set consists of three different attachments: the melamine foam pad, the microfibre pad and the kitchen fibre pad. The melamine dirt eraser is particularly suitable for wet cleaning of painted and unpainted, smooth surfaces. The blue microfibre pad ensures gentle wet cleaning of sensitive surfaces. The green kitchen fibre pad is designed to remove coarse dirt, rust or limescale from impervious surfaces. Delivery includes 2x melamine foam pads, 2x microfibre pads and 2x kitchen fibre pads.

Features & Benefits

- Original Einhell cleaning pad set for Einhell PICOBELLA
- Suitable for the Einhell cordless surface brush PICOBELLA 18/90
- Ideal for wet cleaning indoors
- Melamine foam pad as a dirt eraser for smooth surfaces
- Microfibre pad for cleaning sensitive surfaces
- Kitchen fibre pad for removing coarse dirt
- Incl. 2x white melamine foam pads
- Includes 2x blue microfibre pads
- Incl. 2x green kitchen fibre pads

Technical Data

Logistic Data

- Product weight (kg)

- Gross weight (kg)

- Dimensions single packaging

- Pieces per export carton

- Gross weight of export carton

- Dimensions export carton

0

0.082

112 x 75 x 110 mm

100 Pieces

10.5 kg

550 x 470 x 395 mm

- Container quantities (20"/40"/40"HC) 26500 | 54000 | 64800









