



# Einhell

# EXPERT

## POWER X-CHANGE

Robot Lawn Mower

**FREELEXO+ LCD Kit 900**

Item No.: 3413952

Ident No.: 21031

Bar Code: 4006825649420

The Einhell FREELEXO+ LCD Kit 900 robot lawnmower is a member of the high-performance Power X-Change family which provides unlimited flexibility within the system family. It is controlled via app by Bluetooth or LCD display and the settings of the robot lawnmower can be set to individual requirements. The FREELEXO+ LCD Kit 900 includes everything needed for installation and operation of an Einhell robotic lawnmower of the FREELEXO Series. It is suitable for a lawn area up to 900 m<sup>2</sup>. The scope of delivery includes a 3,0 Ah battery, 190 m wire, 270 fastening hooks, 3 blades and 4 connecting clamps.

## Features & Benefits

- PXC system battery - can also be used for other PXC products
- App using Bluetooth - user-defined robot lawnmower control
- Multi area mowing - for complex gardens
- Intuitive keypad with LCD display
- Programmable operating time for each specific day
- Safety sensor system thanks to impact, tilt and lift sensors
- Anti-theft protection in form of PIN code and warning signal
- Rain sensor
- Cutting height adjustment (20-60mm)
- Suitable for slopes up to 35%
- Carry-handle for comfortable transport
- Automatic return to charging unit and charging
- Lawn areas up to 900 m<sup>2</sup>
- Incl. 3,0 Ah PXC Battery
- Wire 190 m
- Fastening hooks 270 pcs.
- Blades 3 pcs.
- Connecting clamps 4 pcs.



## Technical Data

- Power	18 V
- Battery	18 V   3000 mAh   Li-Ion
- Cutting width	18 cm
- Slope	35 %
- Cutting height adjustment	20 mm - 60 mm
- Recommended area	900 m <sup>2</sup>
- Perimeter wire	190 m
- Hooks	270 Pieces
- Spare blades	3
- Connecting clamps	4 Pieces

## Logistic Data

- Product weight (kg)	15.6
- Gross weight (kg)	19.6
- Dimensions single packaging	727 x 526 x 321 mm
- Pieces per export carton	1 Pieces
- Gross weight of export carton	19.6 kg
- Dimensions export carton	737 x 530 x 327 mm
- Container quantities (20"/40"/40"HC)	224   462   528



## Available as special accessories

	Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory		2x 3,0Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512083 Bar Code: 4006825638509 Einhell Accessory
	18V 4-6Ah Multi-Ah PXC Plus Battery Item No.: 4511502 Bar Code: 4006825644210 Einhell Accessory		18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 Einhell Accessory
	Installation Kit 500m2 Robot Lawn Mower Accessory Item No.: 3414010 Bar Code: 4006825646863 Einhell Accessory		Installation Kit 800m2 Robot Lawn Mower Accessory Item No.: 3414011 Bar Code: 4006825646870 Einhell Accessory
	Installation Kit 1200m2 Robot Lawn Mower Accessory Item No.: 3414012 Bar Code: 4006825646887 Einhell Accessory		18V 2,0Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory
	18V 4,0Ah Power X-Change 1 Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory		18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory
	Spare blades 12 psc Robot Lawn Mower Accessory Item No.: 3414020 Bar Code: 4006825648775 Einhell Accessory		Perimeter wire 50 m Robot Lawn Mower Accessory Item No.: 3414021 Bar Code: 4006825648782 Einhell Accessory
	Connecting clamps 4 psc Robot Lawn Mower Accessory Item No.: 3414022 Bar Code: 4006825648799 Einhell Accessory		Fastening hook 100 psc Robot Lawn Mower Accessory Item No.: 3414023 Bar Code: 4006825648805 Einhell Accessory
	2x2 Power X-Quattrocharger 4A Charger Item No.: 4512102 Bar Code: 4006825649536 Einhell Accessory		18V 2,5Ah Power X-Change Battery Item No.: 4511516 Bar Code: 4006825650518 Einhell Accessory
	Power X-Fastcharger 4A Charger Item No.: 4512103 Bar Code: 4006825650228 Einhell Accessory		18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory
	2x 5,2Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512108 Bar Code: 4006825652376 Einhell Accessory		Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory
	robot lawn mower garage Robot Lawn Mower Accessory Item No.: 3414024 Bar Code: 4006825654417 Einhell Accessory		18V Battery Charger 3,0A - PXC Charger Item No.: 4514095 Bar Code: 4006825655292 Einhell Accessory
	Power X-Car Charger 3A Charger Item No.: 4512113 Bar Code: 4006825655377 Einhell Accessory		2x 4,0Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512112 Bar Code: 4006825655766 Einhell Accessory
	2x 18V 2,5Ah PXC-Twinpack CB Battery Item No.: 4511524 Bar Code: 4006825656206 Einhell Accessory		2x 18V 5,2Ah PXC-Twinpack Battery Item No.: 4511526 Bar Code: 4006825656695 Einhell Accessory
	5,2Ah & 4A Fastcharger PXC-Starter-Kit Item No.: 4512114 Bar Code: 4006825656787 Einhell Accessory		Cleaning Kit Robot Lawn Mower Accessory Item No.: 3414025 Bar Code: 4006825657951 Einhell Accessory



Repair Kit  
Robot Lawn Mower Accessory  
Item No.: 3414026  
Bar Code: 4006825657968  
Einhell Accessory



18V 2,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory



18V 3,0Ah Power X-Change Plus  
Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1  
Battery  
Item No.: 4511489  
Bar Code: 4006825638578  
Einhell Accessory



18V 4,0Ah Power-X-Change Plus  
Battery  
Item No.: 4511553  
Bar Code: 4006825660869  
Einhell Accessory



18V 3,0 Ah Power-X-Change 2  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory