

## MAINTENANCE

### General Maintenance

- Keep all nuts, bolts and screws tight.
- Replace worn or damaged parts for safety.
- Be careful during adjustments of the garden roller to prevent entrapment of the fingers between moving roller and fixed parts.

## SPARE PARTS

Spare parts can be ordered from the Special Orders Desk at your local Bunnings Warehouse or Homebase store. For further information, or any parts visit [www.ozito-diy.co.uk](http://www.ozito-diy.co.uk) or contact Ozito Customer Service: Great Britain: 0151 294 4488 Ireland: 1850 882711 E-mail: [info@ozito-diy.co.uk](mailto:info@ozito-diy.co.uk)

# ozito

## GARDEN ROLLER

 
**570 x 320mm**

### ORIGINAL INSTRUCTIONS


#### SPECIFICATIONS

Roller Width:	570mm
Roller Diameter:	320mm
Roller Volume:	46 litres
Max Weight Water Filled:	57kg
Weight:	10.5kg


[ozito-diy.co.uk](http://ozito-diy.co.uk)

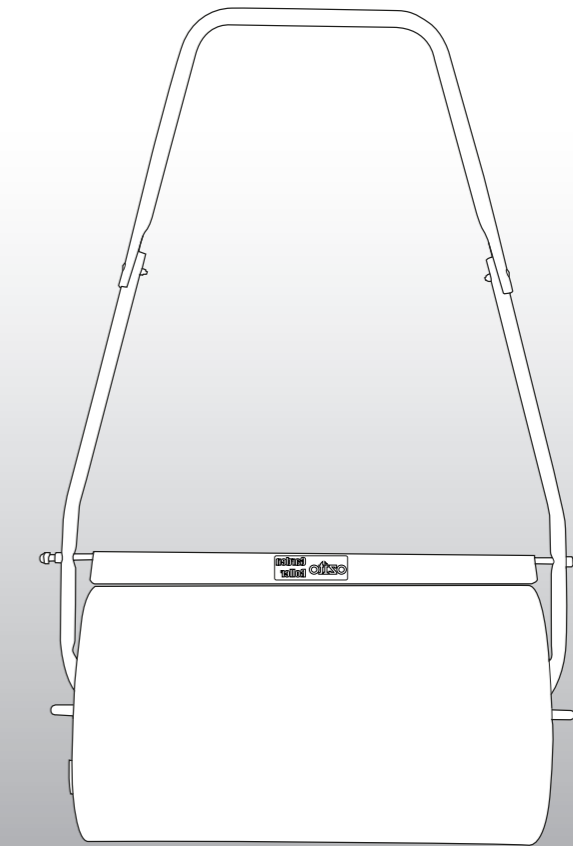

### WHAT'S IN THE BOX

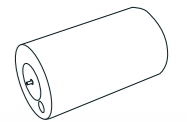 

Roller

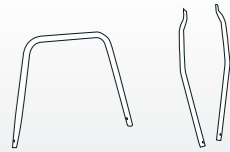 

Upper & Lower Handles



Dirt Wiper



Assembly Fasteners



Roller Plug

# 3 YEAR REPLACEMENT WARRANTY

PSR-5732U

## WARRANTY

All of our products undergo strict quality checks to ensure that they reach you in perfect condition. In the unlikely event that your device develops a fault, please contact our service department at the address shown on this guarantee card. You can also contact us by telephone using the customer service number shown. Please note the following terms under which guarantee claims can be made:

1. These warranty terms regulate additional warranty services, which the manufacturer mentioned below promises to buyers of its new products in addition to their statutory guarantee claims are not affected by this guarantee. Our guarantee is free of charge to you.

2. The warranty services only covers defects due to material or manufacturing faults on a product which you have bought from the manufacturer mentioned below are limited to either the rectification of said defects on the product or the replacement of the product, whichever we prefer. Please note that our devices are not designed for use in commercial, trade or professional applications. A guarantee contract will not be created if the device has been used by commercial, trade or industrial business or has been exposed to similar stresses during the guarantee period.

3. The following are not covered by our guarantee:

- Damage to the device caused by a failure to follow the assembly instructions or due to incorrect installation, a failure to follow the operating instructions (for example connecting it to an incorrect mains voltage or current type) or a failure to follow the maintenance and safety instructions or by exposing the device to abnormal environmental conditions or by lack of care and maintenance.
- Damage to the device caused by abuse or incorrect use (for example overloading the device or the use of unapproved tools or accessories), ingress of foreign bodies into the device (such as sand, stones or dust, transport damage), the use of force or damage caused by external forces (for example by dropping it).
- Damage to the device or parts of the device caused by normal or natural wear or tear or by normal use of the device.

4. Your Product is guaranteed for a period of 36 months from the original date of purchase and is intended for DIY (Do It Yourself) use only. Warranty excludes consumable parts. Guarantee claims should be submitted before the end of the guarantee period within two weeks of the defect being noticed. No guarantee claims will be accepted after the end of the guarantee period. The original guarantee period remains applicable to the device even if repairs are carried out or parts are replaced. In such cases, the work performed or parts fitted will not result in an extension of the guarantee period, and no new guarantee will become active for the work performed or parts fitted. This also applies if an on-site service is used.

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO THE PLACE OF PURCHASE WITH YOUR REGISTER RECEIPT.

 
Please refer to the restrictions of this warranty concerning wearing parts, consumables and missing parts as set out in the service information in these operating instructions.

CUSTOMER SERVICE HELPLINE  
GB: 0151 294 4488  
IRL: 1850 882711  
[Ozito-diy.co.uk](http://Ozito-diy.co.uk)


# KNOW YOUR PRODUCT

## GARDEN ROLLER

- 1. Upper Handle
- 2. Lower Handle
- 3. Dirt Wiper
- 4. Roller Plug
- 5. Roller

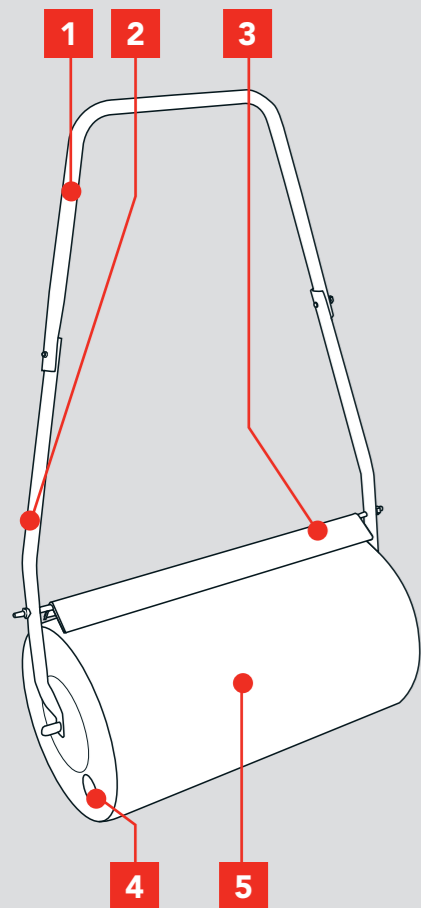

 - 6. M5 Screw x 2
- 7. Thread Cover x 2
- 8. M8 Dome Nut x 2
- 9. M8 Locking Nut x 2
- 10. M5 Locking Nut x 2
- 11. Washer x 2

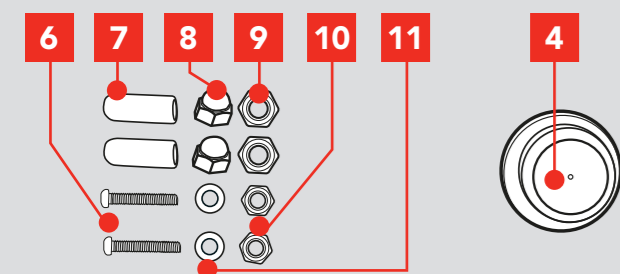

### ONLINE MANUAL

Scan this QR Code with your mobile device to take you to the online manual.



## 1. BEFORE USE

### Items Supplied

Please check that the article is complete as specified in the scope of delivery. If parts are missing, please contact our service centre or the sales outlet where you made your purchase at the latest within 5 working days after purchasing the product and upon presentation of a valid bill of purchase. Also, refer to the warranty table in the service information at the end of the operating instructions.

- Open the packaging and take out the equipment with care.
- Remove the packaging material and any packaging and/or transportation braces (if available).
- Check to see if all items are supplied.
- Inspect the equipment and accessories for transport damage.
- If possible, please keep the packaging until the end of the guarantee period.

### Danger!

The equipment and packaging material are not toys. Do not let children play with plastic bags, foils or small parts. There is a danger of swallowing or suffocating!

### Proper Use

Lawn and garden roller for rolling surfaces and freshly sown seed (for example grass seed but also seed in beds) to ensure that the seed is perfectly inserted in the soil. The roller can also be used after the lawn area has been scarified or fertilized.

The machine is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

 
# SETUP & PREPARATION

## 2. ASSEMBLY



You will need 8mm, 13mm and 14mm open-ended spanners and a #2 Phillips screwdriver for the assembly (not supplied).

### Fitting the Lower Handles

1. Fit the lower handle onto the roller.

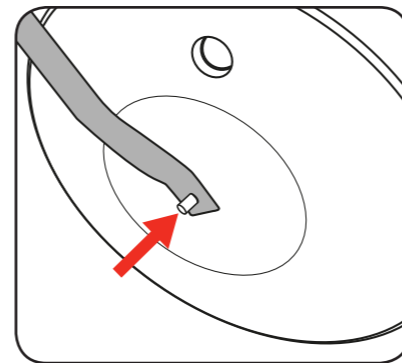


  2. Fit the thread of the dirt wiper into the lower handle and secure in place, first with M8 locking nut and then M8 dome nut.

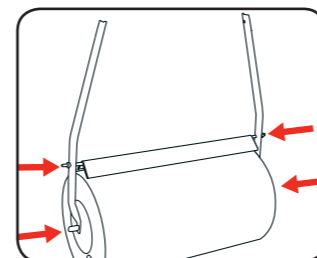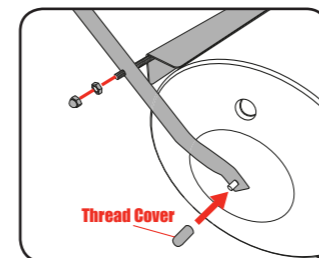


### Fitting the Upper Handles

 1. Place the upper handle over the upper ends of the lower handle.

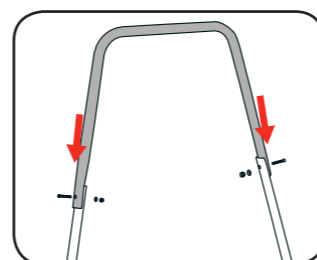


 2. Fit the M5 screws through the upper handle and then through the holes in the lower handle. Secure in place with a washer and M5 locking nut.

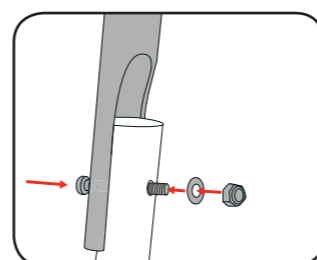

Once assembled, fill the roller with water or dry sand via the fill port.

 
**NOTE:** Capacity 46 litres.

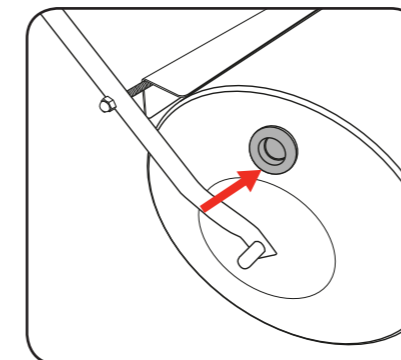

## 3. ADJUSTMENTS


### Adjusting the Dirt Wiper

 Rotate the dirt wiper so the front part of the wiper wipes away so that as little soil as possible remains on the roller.

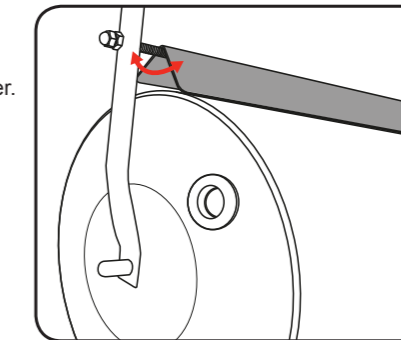

### Changing the Weight

 Changing the weight is easy, and requires no tools. Simply fill or empty the roller of water or dry sand until the roller is at the desired weight.

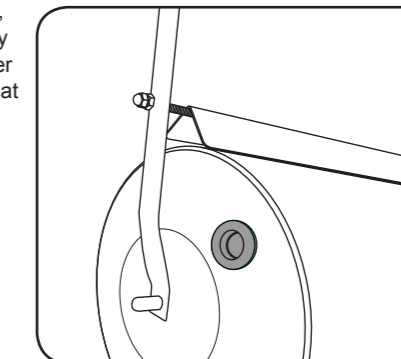

# OPERATION

## 4. HOW TO ROLL

### Tips

- While using the garden roller always wear substantial footwear and long trousers.
- Make sure the lawn is clear of sticks, stones, wire and debris; that could be flattened by the garden roller.
- Walk at a good, steady pace.
- Pull the roller over the ground you wish to roll in even strips.
- Adjust the dirt wiper so that as little soil as possible remains on the roller.
- Only roll dry ground.

### Overlapping Rows

When rolling a lawn, slightly overlap the row that has already been rolled. Overlapping rows will also ensure a neat roll by flattening grass or dirt that may have been missed on the previous row.

