



# LI-ION 3.6V CORDLESS SCREWDRIVER

BT-SD 3.6/Li

## QUICK START GUIDE

Easy steps to getting started.

1. Read the user guide for all SAFETY aspects of using your TAURUS TITANIUM® 3.6V CORDLESS SCREWDRIVER.
2. Carefully remove the CORDLESS SCREWDRIVER from the packaging, take care that you have all parts supplied in the packaging before discarding.
3. Plug the battery charger in the plug socket and connect the charging cable to the charging connection (8). The charging control light (7) on the CORDLESS SCREWDRIVER will be red. When the charging is completed after 3-5 hours, the charging control light (7) goes out.
4. Use the Forward/Reverse switch (10) above the ON/OFF switch (9) to select between forward and reverse rotation.
5. The screwdriver can be locked into 2 different angle settings. To do so, press the locking button (3) and move the screwdriver into the desired position. Then release the locking button (3). **Important!** Before you switch on the screwdriver, make sure that it is correctly locked in the angle position in question.
6. To see the charge state of the battery, press the button for the battery capacity indicator (6). (Refer to User Guide, Section 7.5).
7. **Important!** Set the Forward/ Reverse switch (10) to its centre position whenever you carry out any work on the cordless screwdriver. To change the accessory pull back and hold the locking sleeve (13). Insert the bit into the bit chuck (1) and let go of the locking sleeve (13). Make sure that it is secure by attempting to pull the accessory apart again.
8. For screwdriving make sure to use a bit that matches the screw in shape and size. Set the torque with the torque selector (14), refer to the User Guide, Section 7.8 and 7.9 for more information. **Important!** The tool must be at a standstill when you set the torque.
9. To start the CORDLESS SCREWDRIVER, press the ON/OFF switch (9).

**10. IF IN DOUBT PLEASE REFER TO THE USER GUIDE PROVIDED.**

