



IMPORTANT:

READ THIS CARD BEFORE USE

On initial use of a rotary hammer, you may find the hammer mode does not impact.

During the manufacturing process, grease is packed into the hammer function for lubrication. If there is excess grease, you may find the rotary hammer will not activate when the product is first used.

To activate, first insert a chisel or drill bit and then set to the hammer function. Hold the rotary hammer securely with both hands and squeeze the on/off trigger to start the drill.

With the tool turned on, tap the chisel or drill bit up and down onto a scrap piece of material and the hammer function will engage.

After repacking of grease (see instruction manual) the above steps may need to be repeated.

Note: Ozito tools are guaranteed for the period specified from the original date of purchase. They are intended for DIY (Do It Yourself) use ONLY. Trade, commercial/high frequency use will void the warranty.

