Einhell

POWER X CHANGE

Robot Lawn Mower

RSM5/850

Item No.: 3414056

Ident No.: 21016

Bar Code: 4006825693560

Technical Data

- Automatic Mapping	Yes
- Cutting height max.	60 mm
- Cutting height min.	30 mm
- Cutting width	20 cm
- Max. mowing area gradient	30 %
- Max. recommended lawn area	850 m²
- Mowing mode/algorithm	Lanes
- Mowing surface boundary	Camera
- Number of batteries included in delivery	1 pcs
- Number of spare blades included in delivery	3 pcs
- Triple Camera AI-Vision-System	Yes
- Working memory	3 GB


Logistic Data

- Product weight	9.625 kg
- Gross weight	21.8 kg
- Dimensions single packaging	875 mm x 440 mm x 440 mm
- Pieces per export carton	1 pcs
- Gross weight of export carton	21.5 kg
- Dimensions export carton	865 mm x 437 mm x 440 mm
- Container quantities (20"/40"/40"HC)	160 pcs | 335 pcs | 395 pcs







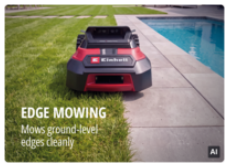



Illustrations can contain accessories, which are not included in standard extent of delivery
Illustration similar (in design), production-wise modifications reserved
GS mark belongs to the product itself only, excluded accessory

Available as special accessories



Replacement Blades Set, 12 pcs.
Robot Lawn Mower Accessory
Item No.: 3414020
Bar Code: 4006825648775
Einhell Accessory



PXC 18V 4,0Ah C01
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



PXC+ 18V 3,0Ah
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



PXC 18V 2,5Ah
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



PXC+ 18V 5-8Ah MULTI
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



18V 4,0Ah PXC Starter Kit C1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



2x 5,2Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



PXC 18V 2,0Ah
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



PXC 18V 5,2Ah
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC+ 18V 4-6Ah MULTI
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



PXC+ 18V 4,0Ah
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory

Illustrations can contain accessories, which are not included in standard extent of delivery
Illustration similar (in design), production-wise modifications reserved
GS mark belongs to the product itself only, excluded accessory