
MAINTENANCE


WARNING! BEFORE CLEANING OR CARRYING OUT ANY MAINTENANCE PROCEDURE, ENSURE THAT THE BATTERIES HAVE BEEN REMOVED.

Cleaning

- Keep the ventilation slots of the tool clean at all times to ensure efficient operation.
- After each use, blow air through the tool housing to ensure it is free from all dust, dirt, etc. Build up of dust or dirt particles may cause the tool to overheat and shorten the life of the tool.
- If the housing of the tool requires cleaning, do not use solvents. Use of a cloth only is recommended.
- Never allow any liquid to get inside the tool, never immerse any part of the tool into liquid.
- We recommend cleaning the equipment immediately each time after use.
- Immediately after each use, run clean water through the vacuum to rinse it out.
- When the foam filter gets dirty, take out the dirty water tank from the tool.
- When the foam filter gets dirty, take out the dirty water tank from the tool. Remove the foam filter, rinse it under running water and leave it to dry.

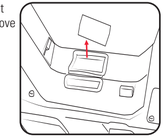

- Press the release button (a) and remove the cleaning brush from the cleaning nozzle (b). When reinserting it, ensure it clicks firmly into place. Clean the cleaning brush with the supplied cleaning tool.

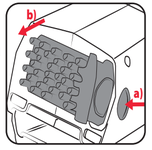

Storage

When not in use, the tool should be stored in a dry, frost free location, keep out of children's reach.

Note: Ozito will not be responsible for any damage or injuries caused by repair of the tool by an unauthorised person or by mishandling.

TROUBLESHOOTING

Flashing Red LED (8 seconds):

The cleaning brush may be jammed. Please follow the cleaning instructions to remove any built-up dirt or debris.

Flashing Red LED (9 seconds):

The water pump has tripped due to overcurrent. To resolve this, gently wiggle the tank bleed valve to vent the accumulated air pressure.

DESCRIPTION OF SYMBOLS

dc/⎓	Direct current	ml	Millilitre
⚠	Warning	III	Class III
V	Volts		Regulatory Compliance Mark (RCM)
	Read instruction manual		Keep hair away out of the openings while the spot cleaner is running

CARING FOR THE ENVIRONMENT

Power tools that are no longer usable should not be disposed of with household waste but in an environmentally friendly way. Please recycle where facilities exist. Check with your local council authority for recycling advice.

Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment. Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.

SPARE PARTS

Spare parts can be ordered from the Special Orders Desk at your local Bunnings Warehouse.

For further information, or any parts not listed here, visit www.ozito.com.au or contact Ozito Customer Service:

Australia 1800 069 486
New Zealand 0508 069 486
E-mail: hello@ozito.com.au

⚠ ELECTRICAL SAFETY

WARNING! When using electric tools basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury.

- Read the whole manual carefully and make sure you know how to switch the tool off in an emergency, before operating the tool. Save these instructions and other documents supplied with this tool for future reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is compatible and only to be used with all batteries & chargers from the Ozito PXC range. Refer to the PXC battery and charger manuals for information regarding charging, use and storage.
- **WARNING!** Always remove the battery from the tool:
  - when the batteries are to be charged,
  - when the tool is left unattended,
  - when the tool is being checked, cleaned, or having maintenance work done,
  - when the tool is to be stored,
  - or if the tool vibrates abnormally.
- Do not combine different types of batteries or new and used batteries.
- Do not use modified or damaged batteries.

⚠ GENERAL POWER TOOL SAFETY WARNINGS

WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.

b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.

c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2) Electrical safety

a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.

b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.

c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.

d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.

e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.

f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3) Personal safety

a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.

b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.

c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.

f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.

g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

4) Power tool use and care

a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.

b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.

e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.

f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

5) Battery tool use and care

a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

b) **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.

c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.

d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.

e) **Do not use a battery pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.

f) **Do not expose a battery pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 130 °C may cause explosion.

g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

6) Service

a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

b) **Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service providers.

⚠ SPOT CLEANER SAFETY WARNINGS

When using the equipment, a few safety precautions must be observed to avoid injuries and damage. Please read the complete operating manual with due care. Keep this manual in a safe place so that the information is available at all times. If you give the equipment to any other person, give them these operating instructions as well.

We cannot accept any liability for damage or accidents which arise due to a failure to follow these instructions and the safety information.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

The appliance is not intended for use by young children or infirm persons without supervision. Children should be supervised to ensure they do not play with the appliance.

- **Do not leave appliance unattended when connected to the power supply. Remove battery when not in use and before servicing and cleaning.**
- **To avoid electric shock, do not expose to rain. Store indoors.**
- **Never use in the presence of explosive liquids, vapours or explosive dust – such as coal or grain.**
- **Use only manufacturer's recommended attachments and consumables.**
- **Never modify the cleaner in any way - this is dangerous and will invalidate the warranty.**
- **When lifting the unit, always lift it with the handle. Beware of excess weight.**
- **Children should be supervised to ensure that they do not play with the appliance.**
- **The appliance is not suitable for the cleaning of combustible, explosive or harmful substances.**
- **The tool must be placed on a flat, stable surface.**
- **Do not touch the running brush roller.**
- **Never pick up asbestos or asbestos dust.**
- **Do not pick up any material that is burning or smouldering such as metal grinding dust, cigarette ends, matches etc.**
- **Always switch the unit off before changing attachments.**
- **The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.**
- **Do not run over cleaning tool over power cord. It may cause electrical shock.**
- **The tool is approved for use only with clean tap water and standard, commercially available spot cleaning products. When using cleaning products, refer to the instructions for use, safety information etc. provided by the manufacturer.**
- **Do not use water that is dirty, gritty, or contains chemical substances, as this may hinder proper operation and reduce the lifespan of the equipment.**
- **If cleaning product gets into contact with your skin or into your eye, rinse immediately with lots of clean water. Then consult a doctor or follow the steps described on the safety data sheet or provided by the manufacturer of the cleaning product.**
- **Do not use the tool unless it has been fully and correctly assembled.**
- **Do not tip over or shake the tool as water may leak from the tanks.**
- **The tool is for household and indoor use only.**

ozito XPXC BATTERY SYSTEM


SPOT CLEANER

INSTRUCTION MANUAL

SPECIFICATIONS

Input:	18V
Clean Water Tank Volume:	200ml
Max. Water Temperature:	40°C
Max. Dirty Water Tank Volume:	200ml
IP Rating:	IPX4
Weight:	2.1kg

ozito.com.au

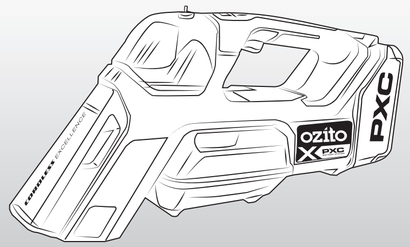

5 YEAR REPLACEMENT WARRANTY

PSCS-240

STANDARD EQUIPMENT



Cordless Spot Cleaner



Flat Brush, Rotating Brush, Cleaning Tool

WARRANTY

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO YOUR NEAREST BUNNINGS WAREHOUSE WITH YOUR BUNNINGS REGISTER RECEIPT. PRIOR TO RETURNING YOUR PRODUCT FOR WARRANTY PLEASE TELEPHONE OUR CUSTOMER SERVICE HELPLINE:

Australia 1800 069 486
New Zealand 0508 069 486

TO ENSURE A SPEEDY RESPONSE PLEASE HAVE THE MODEL NUMBER AND DATE OF PURCHASE AVAILABLE. A CUSTOMER SERVICE REPRESENTATIVE WILL TAKE YOUR CALL AND ANSWER ANY QUESTIONS YOU MAY HAVE RELATING TO THE WARRANTY POLICY OR PROCEDURE.

WARNING

The following actions will result in the warranty being void.

- If the tool has been operated on a supply voltage other than that specified on the tool.
- If the tool shows signs of damage or defects caused by or resulting from abuse, accidents or alterations.
- Failure to perform maintenance as set out within the instruction manual.
- If the tool is disassembled or tampered with in any way.

The benefits provided under this warranty are in addition to other rights and remedies which are available to you at law.

Our goods come with guarantees that cannot be excluded at law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Generally you will be responsible for all costs associated with a claim under this warranty, however, where you have suffered any additional direct loss as a result of a defective product you may be able to claim such expenses by contacting our customer service helpline above.

5 YEAR REPLACEMENT WARRANTY

Your Product is guaranteed for a period of 60 months from the original date of purchase and is intended for DIY (Do It Yourself) use only. If a product is defective it will be replaced in accordance with the terms of this warranty **Lithium Ion batteries and chargers are covered by a 36 month warranty** and are excluded from the warranty extension. Warranty excludes consumable parts.


OZITO 25 Fox Drive, Dandenong South, VIC 3175, Australia.

0526

KNOW YOUR PRODUCT


CORDLESS SPOT CLEANER

1. Suction Nozzle
2. Spray Nozzle
3. Clear Water/ Solution Tank
4. Tank Bleed Valve
5. LED Indicator
6. Rotating Brush On/Off Switch
7. Vacuum On/Off Switch
8. Spray Trigger
9. Sure Grip Handle
10. Battery Compartment Cover
11. Battery Compartment
12. Dirty Water Tank Release Button (rear)
13. Dirty Water Tank

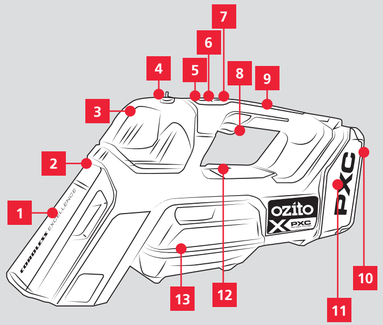

ACCESSORIES

14. Flat Brush
15. Rotating Brush
16. Cleaning Tool



BATTERY & CHARGER

This tool is compatible with all batteries & chargers from the Ozito PXC range.

ONLINE MANUAL

Scan this QR Code with your mobile device to take you to the online manual.


5 YEAR REPLACEMENT WARRANTY

SETUP & PREPARATION

1. FITTING THE BATTERY


Installing The Battery Pack

1. Open up the battery compartment cover (a), slide the battery into the tool base until it clicks into place (b). Close the battery compartment cover and ensure it is watertight.

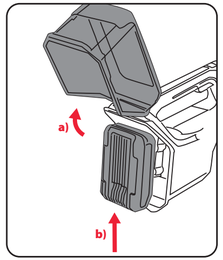

Removing The Battery Pack

1. Open up the battery compartment cover, hold down the battery release button (a) and slide the battery out. (b) Close the battery compartment cover.

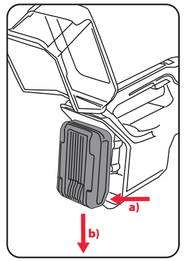

2. ASSEMBLY

WARNING! ENSURE THE TOOL IS SWITCHED OFF AND THE BATTERY IS REMOVED BEFORE PERFORMING ANY OF THE FOLLOWING TASKS.


Fitting the Clear Water Tank

1. Gently pull the clear water tank away from the tool to remove it. Make sure that the tank securely fits back into place when you reinsert it on the tool.



Fitting the Dirty Water Tank

1. Press and slide the dirty water tank release button toward the tool to remove the dirty water tank.

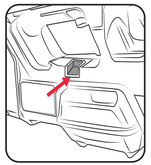


2. Slide the base of the dirty water tank onto the tool and push it forward until it clicks into place. Make sure the tank is locked in tight.




Fitting the Suction Nozzle

1. Gently pull the suction nozzle and slide it out from the tool. To reattach, align the suction inlet with the nozzle and push it toward the tool until it clicks into place.

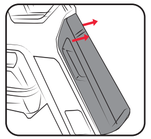

Fitting the Cleaning Brush

1. Press the release button (a) and remove the cleaning brush from the cleaning nozzle (b). When reinserting it, ensure it clicks firmly into place.

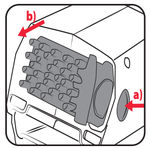


OPERATION

3. CONTROLS

WARNING! DO NOT PUT HAND OR FINGERS NEAR MOTORIZED CLEANING HEAD WHILE APPLIANCE IS RUNNING.


Spray Trigger

1. Press and hold the spray trigger to spray the desired amount of water onto the surface to be cleaned.

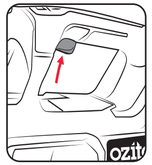

Rotating Brush On/Off Switch

1. Press the on/off switch to activate the rotating brush, and press it again to turn it off.

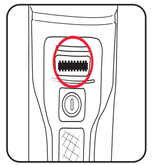


Note: The rotating function only works when the rotating brush is attached. It does not work with the flat brush attachment.

Note: The LED indicator illuminates in white when the rotating function is active.

Vacuum On/Off Switch

1. Press the on/off switch to start the vacuum. Press it again to turn it off.

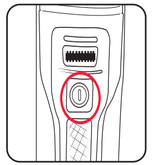

Note: Both the rotating function and the vacuum will turn off together if they are both active.


4.USAGE

Filling the Clear Water Tank

1. Remove the clear water tank.



2. Unscrew the tank cap and fill it up with tap water or cleaning solution. Screw the cap back on tightly and clip the clean water tank back onto the tool.




Note: When using a cleaning solution for the first time, test it on an inconspicuous area to prevent fabric discolouring.

Note: Never operate the tool without water.

Using the Spot Cleaner


1. Always hold the spot cleaner upright against the surface. Keeping the nozzle flat and level ensures maximum suction for better stain removal and prevents liquid from spreading.

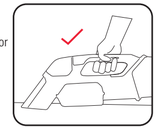

Note: Avoid rapid back and forth movements, which could cause liquid to get into the exhaust.

Note: Avoid using excessive force when cleaning carpets or delicate surfaces. Applying gentle, steady pressure is enough to remove stains without damaging the fibres.

2. Avoid tilting the spot cleaner or holding it at an angle during use. Keeping the unit upright and the nozzle flush against the surface ensures maximum suction and prevents dirty water from leaking or spreading.

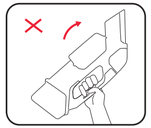


WARNING! DO NOT OVERFILL THE DIRTY WATER TANK! THE LEVEL MUST NOT EXCEED THE MAX MARK. DRAIN THE WATER IMMEDIATELY AFTER THE WATER LEVEL REACHES ABOVE THE MAX MARK.

Empty the dirty water tank


1. When the dirty water reaches the 'MAX' mark, remove the tank from the tool.



2. Open the tab to empty the dirty water tank.

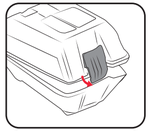

3. Once emptied, securely reattach the tank to the tool.

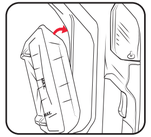

Note: If water comes out of the exhaust, switch off the tool immediately and empty the dirty water tank.