


PAYS-001

Y-Strainer

Filters out large matter from entering your pump including leaves, sticks and other debris that can reduce its efficiency and has a removable, washable filter. The Y-Strainer is recommended for applications with low flow rates. Installation is simple as the Y-Strainer has 25mm inlet & outlet for connecting between the tank and pump. These instructions are to be used as a guide only. Always read the instruction manual supplied with your pump for full details relating to safety instructions, assembly, operation and maintenance of your pump. For higher flow rates and continues use we recommend the Ozito PAFP-001 Pre-Filter Cartridge.



Teflon tape (not included) is recommended on threads to ensure a water tight seal and prevent any leakage.

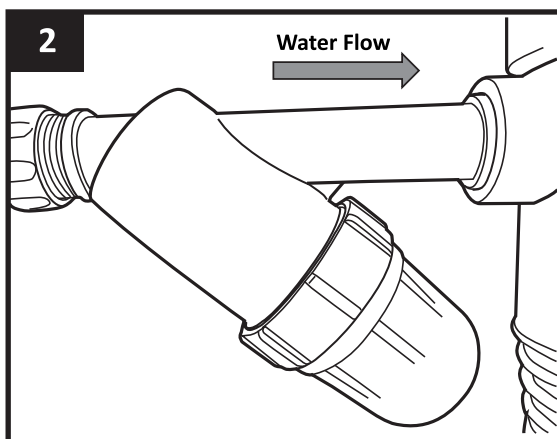

IMPORTANT: Before connecting ensure your tanks water outlet is closed off. Connect the Y-Strainer between your tanks water outlet and the pumps suction inlet. Position the filter so that the arrow on the body points in the direction of the water flow. Ensure that there is at least 100mm between the filter and pump to allow the filter to be removed for cleaning.

Cleaning the Filter

IMPORTANT: Before cleaning ensure your tanks water outlet is closed off. Open and remove the screw cap by turning anti-clockwise. Remove the filter from the filter cavity and gently hose down with low pressure water. Remove any debris in the filter cavity before re-fitting the filter. Regular inspection of the filter and filter cavity is recommended as a build up of debris will reduce your pumps performance and could damage internal components.